


## FK 2008R.11

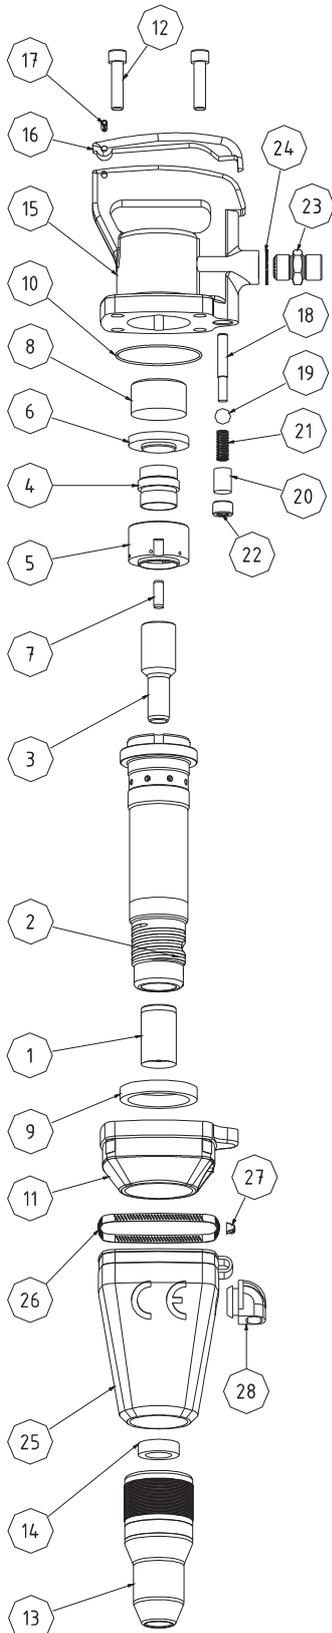

### Ersatzteilliste

Pos.	Stück	Benennung	Bestell-Nr.	Einsteckende
1	1	Buchse	.52/7872	R 25x75
2	1	Zylinder	.52/7885	
3	1	Kolben	.52/7886	
4	1	Rohrschieber	.52/0294	
5	1	Steuergehäuse	.52/7887	
6	1	Deckel	.52/7888	
7	1	Stift	304/3635	
8	1	Puffer	307/2564	
9	1	Ring	307/2516	
10	1	O-Ring	307/2477	
11	1	Spannflansch	.52/2504R	
12	4	Schraube	308/060450	
13	1	Schraubkappe kpl.	.52/7878	
14	1	Prellring	307/2043	
15	1	Griff kpl.	.52/2550	
16	1	Drücker	307/2556	
17	1	Spannstift	304/3532	
18	1	Ventil	.52/7532	
19	1	Kugel	307/2088	
20	1	Stopfen	.52/2510	
21	1	Feder	304/7535	
22	1	Stopfen	318/0206 21 00	
23	1	Nippel	306/0228	
24	1	Sicherungsring	304/7165	
25	1	Schalldämpfer	307/2569	
26	1	Spannband	.52/2509	
27	1	Spannschloß	306/0489	
28	1	Umlenkung	307/2573	