


FK 2008R.41

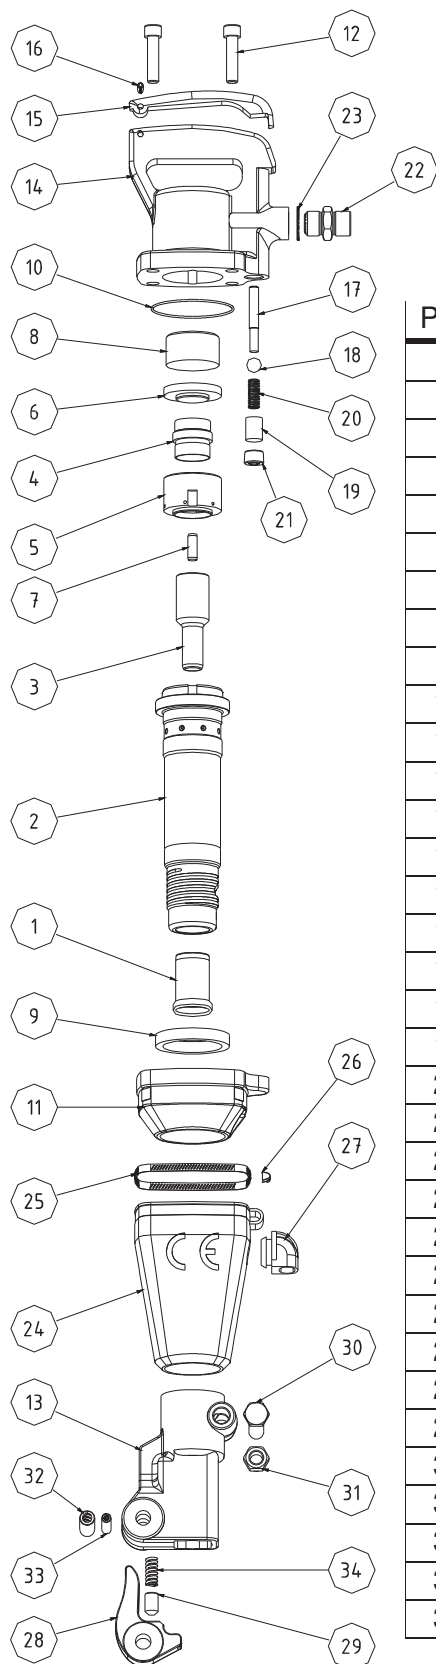

Ersatzteilliste

Pos.	Stück	Benennung	Bestell-Nr.	Einsteckende
1	1	Buchse	.52/7504	S 22x82,5
2	1	Zylinder	.52/7885	
3	1	Kolben	.52/7886	
4	1	Rohrschieber	.52/0294	
5	1	Steuergehäuse	.52/7887	
6	1	Deckel	.52/7888	
7	1	Stift	304/3635	
8	1	Puffer	307/2564	
9	1	Ring	307/2516	
10	1	O-Ring	307/2477	
11	1	Spannflansch	.52/2504R	
12	4	Schraube	308/060450	
13	1	Haltekappe kpl.	.52/2507	
14	1	Griff kpl.	.52/2550	
15	1	Drücker	307/2556	
16	1	Spannstift	304/3532	
17	1	Ventil	.52/7532	
18	1	Kugel	307/2088	
19	1	Stopfen	.52/2510	
20	1	Feder	304/7535	
21	1	Stopfen	318/0206 21 00	
22	1	Nippel	306/0228	
23	1	Sicherungsring	304/7165	
24	1	Schalldämpfer	307/2569	
25	1	Spannband	.52/2509	
26	1	Spannschloß	306/0489	
27	1	Umlenkung	307/2573	
28	1	Haltehebel	.52/2846	
29	1	Druckstift	.52/8115	
30	1	Schraube	308/100105	
31	1	Mutter	308/110020	
32	1	Spannstift	304/3654	
33	1	Spannstift	304/3653	
34	1	Druckfeder	304/7501	