



ST 02V

Spare parts list

Pos.	Item	Name	Order no.
1	1	cylinder	.52/7591
2	1	piston rod	.52/8053
3	1	guide case	.52/7595
4	1	packing case	.52/8057
5	1	packing case	.52/8059
6	2	packing	307/2051
7	1	rotary tube	.52/8042
8	1	connection	.52/7597
9	1	fitting	.52/8043
10	1	exhaust deflector	304/7215
11	1	snap ring	.52/8034
12	1	bottom cap	.52/8035
13	1	control plate	.52/8036
14	1	top cap	.52/8038
15	1	locknut	.52/8069
16	1	hood	.52/8194
17	1	valve pin	.52/8197
18	1	ball	307/2084
19	1	spring	304/7015
20	1	stuff	306/0200
21	1	lever	.52/8047
22	1	pin	304/3443
23	1	o-ring	307/2045
24	1	angle	304/6431
25	1	packing	.52/2991
26	1	pin	304/3432
27	1	Collet	304/3427