
9 Exploded view FK 120.3

FK 120.3: exploded view for parts identification, not a dimensional drawing. Blue links open the spare parts in the shop.

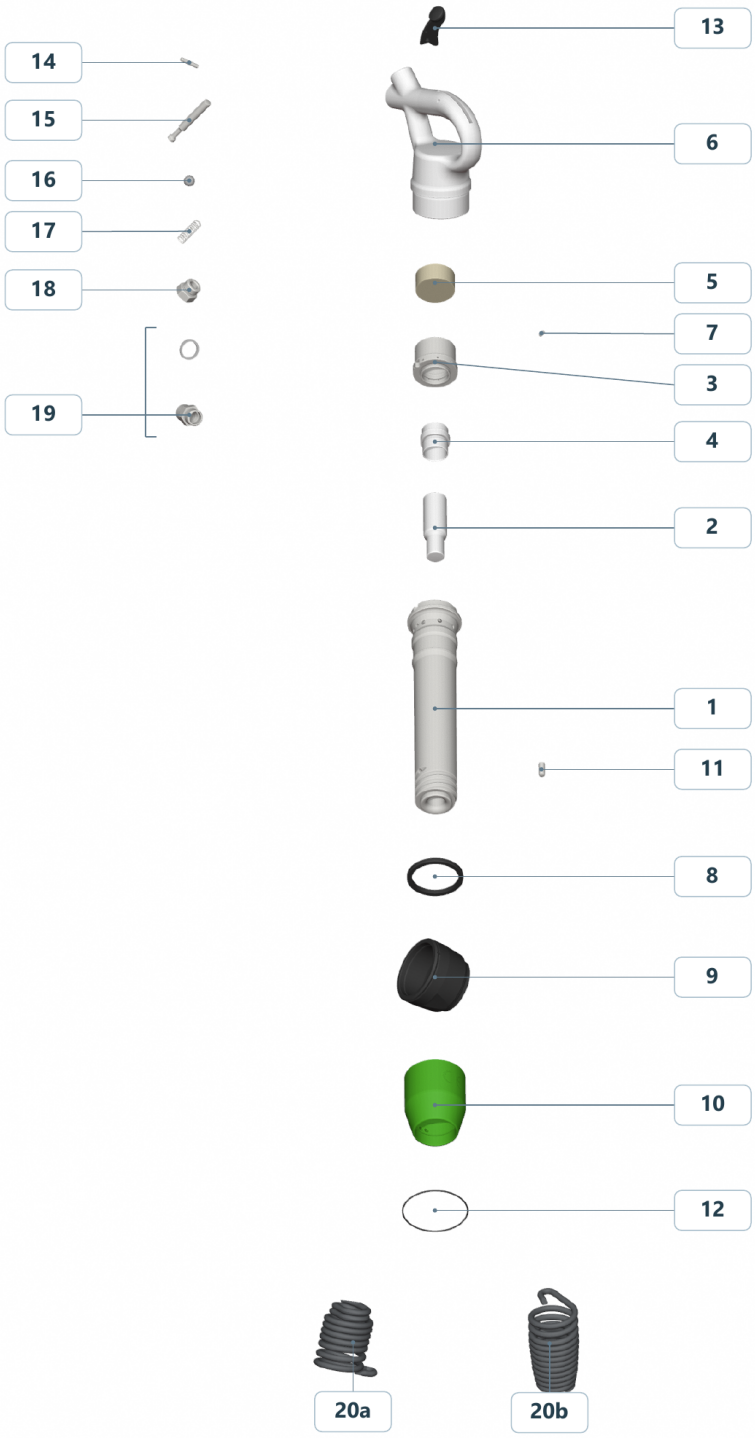

10 Spare parts

Item	Qty.	Description	Part number
1	1	Cylinder	052-0566
2	1	Piston	052-0232
3	1	Cylinder cover	052-0284
4	1	Valve sleeve	052-0238
5	1	Buffer	307-2504
6	1	Complete handle	052-0535
7	1	Cylindrical pin	304-3628
8	1	Ring	307-2545
9	1	Clamping nut	052-05071
10	1	Silencer	052-0567B
11	1	Cylindrical pin	304-3630
12	1	O-ring	307-2167
13	1	Trigger	052-0057
14	1	Pin	304-3442
15	1	Valve	052-0117
16	1	Ball	307-1987
17	1	Spring	304-7018
18	1	Plug	306-0202
19	1	Nipple	306-0223
20a	1	Spring cap	304-7801
20b	1	Spring cap	304-7811

NOTICE – Damage to the hammer
Reusing the existing buffer when replacing the cylinder cover can damage the hammer. Always replace buffer 307-2504 during this work.

Variants and spare-parts orders
R 23 × 65 inserted tool directly in cylinder (1). Spring cap 20a (304-7801) is supplied; spring cap 20b (304-7811) is an optional alternative. Use only one cap at a time. No additional impact rings. State article number 052-6029 when ordering.