
9 Exploded view FK 141.3

FK 141.3: exploded view for parts identification, not a dimensional drawing. Blue links open the spare parts in the shop.

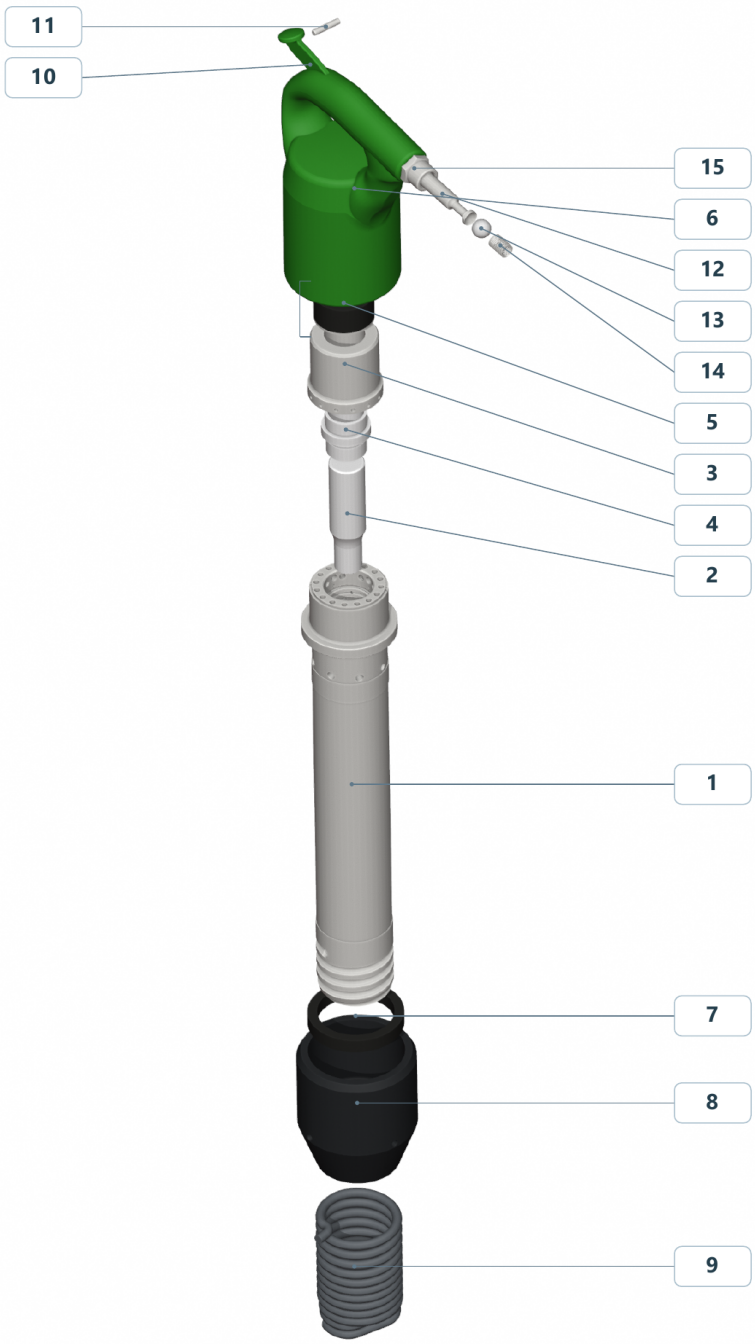

10 Spare parts

Item	Qty.	Description	Part number
1	1	Cylinder	052-7041
2	1	Piston	052-7032
3	1	Cylinder cover	052-7033
4	1	Valve sleeve	052-7034
5	1	Buffer	052-0508
6	1	Complete handle	052-7025
7	1	Ring	307-2516
8	1	Clamping nut	052-7018
10	1	Trigger	052-0057
11	1	Pin	304-3442
12	1	Valve	052-7021
13	1	Ball	307-2088
14	1	Spring	304-7535
15	1	Nipple	306-0223
9	1	Spring cap	304-7178

NOTICE – Damage to the hammer
Reusing the existing buffer when replacing the cylinder cover can damage the hammer. Always replace buffer 052-0508 during this work.

Variants and spare-parts orders
R 31 × 70 inserted tool directly in cylinder (1). Fit spring cap (9), article 304-7178, without additional impact rings. Ring (7), article 307-2516, belongs to the handle/clamping-nut joint. Noise attenuation is integrated into clamping nut (8); the tool has no vibration damping. State article number 052-6059A when ordering.