9 Exploded view FK 2008 R.10

FK 2008 R.10 · 052-640710 · R 25x75. Blue links open spare parts in the shop.



10 Spare parts

Item	Qty.	Description	Part number
1	1	Bushing	052-7872
2	1	Cylinder	052-7885
3	1	Piston	052-7886
4	1	Valve sleeve	052-0294
5	1	Valve housing	052-7887
6	1	Valve housing cover	052-7888
7	1	Pin	304-3635
8	1	Buffer	307-2564
9	1	Ring	307-2516
10	1	O-ring	307-2477
11	1	Clamping flange	052-2504R
12	4	Screw	308-060450
14	2	Impact ring	307-2043
15	1	Complete handle	052-2550
16	1	Trigger	307-2556
17	1	Spring pin	304-3532
18	1	Valve	052-7532
19	1	Ball	307-2088
20	1	Plug	052-2510
21	1	Spring	304-7535
22	1	Plug	318-0206 21 00
23	1	Nipple	306-0228
24	1	Sealing ring	313-531775
13	1	Complete screw cap	052-7878


NOTICE – Damage to the cylinder
Incorrect removal or replacement of the chisel bushing can damage the cylinder. Have chisel bushings replaced exclusively by F+K Service. Do not remove or replace them yourself.

NOTICE – Damage to the hammer
Reusing the old buffer when replacing the control housing cover can damage the hammer. Always replace buffer 307-2564 during this work.

Variants and spare-parts orders
Handle 052-2550 with rigid connection. Order parts using the article number of this version.

9 Exploded view FK 2008 R.11

FK 2008 R.11 · 052-640711 · R 25x75. Blue links open spare parts in the shop.

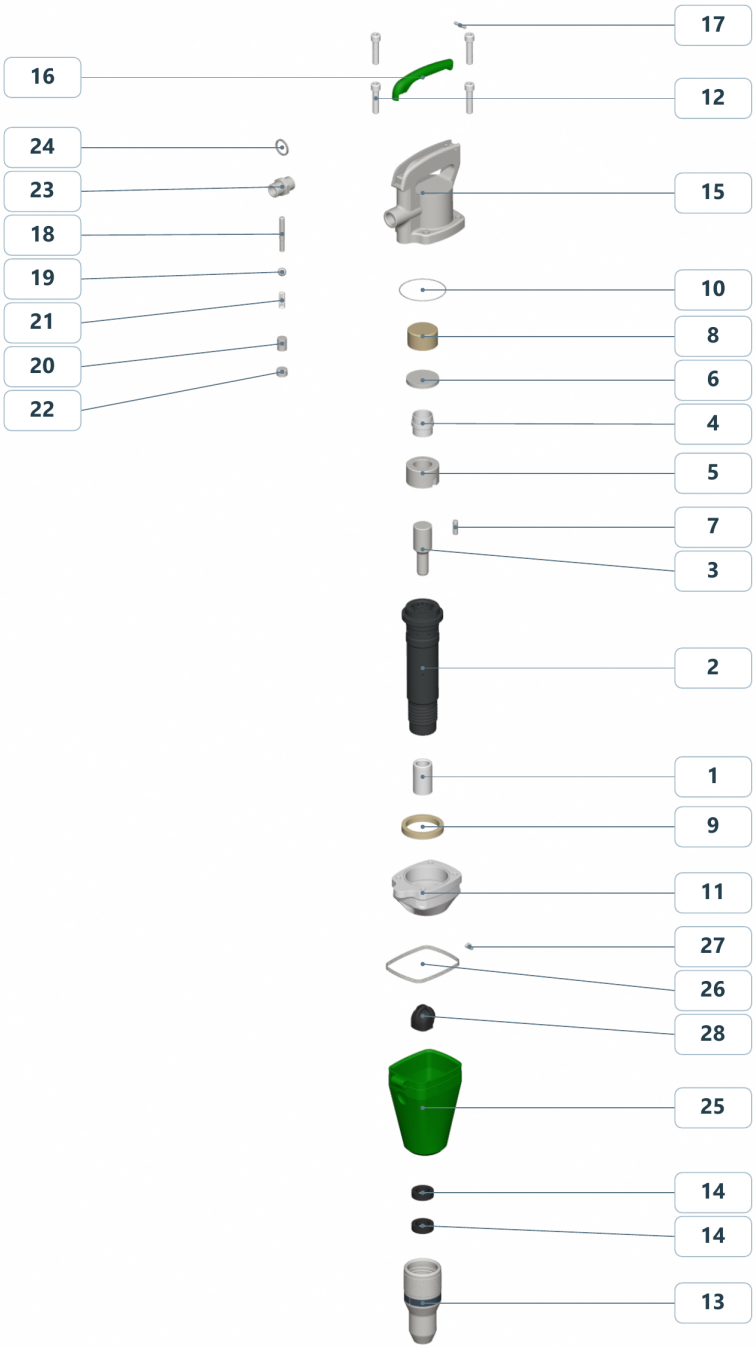

10 Spare parts

Item	Qty.	Description	Part number
1	1	Bushing	052-7872
2	1	Cylinder	052-7885
3	1	Piston	052-7886
4	1	Valve sleeve	052-0294
5	1	Valve housing	052-7887
6	1	Valve housing cover	052-7888
7	1	Pin	304-3635
8	1	Buffer	307-2564
9	1	Ring	307-2516
10	1	O-ring	307-2477
11	1	Clamping flange	052-2504R
12	4	Screw	308-060450
14	2	Impact ring	307-2043
15	1	Complete handle	052-2550
16	1	Trigger	307-2556
17	1	Spring pin	304-3532
18	1	Valve	052-7532
19	1	Ball	307-2088
20	1	Plug	052-2510
21	1	Spring	304-7535
22	1	Plug	318-0206 21 00
23	1	Nipple	306-0228
24	1	Sealing ring	313-531775
25	1	Silencer	307-2569
26	1	Clamping band	052-2509
27	1	Clamping fastener	306-0489
28	1	Deflector	307-2573
13	1	Complete screw cap	052-7878

NOTICE – Damage to the cylinder
Incorrect removal or replacement of the chisel bushing can damage the cylinder. Have chisel bushings replaced exclusively by F+K Service. Do not remove or replace them yourself.

NOTICE – Damage to the hammer
Reusing the old buffer when replacing the control housing cover can damage the hammer. Always replace buffer 307-2564 during this work.

Variants and spare-parts orders
Handle 052-2550 with rigid connection. Order parts using the article number of this version.

9 Exploded view FK 2008 R.12

FK 2008 R.12 · 052-640712 · R 25 x 75. Blue links open spare parts in the shop.



34 = complete hose: 26–32 and 2 × clamping fastener 25.
Flexible hoses shown shortened.

10 Spare parts

Item	Qty.	Description	Part number
1	1	Bushing	052-7872
2	1	Cylinder	052-7885
3	1	Piston	052-7886
4	1	Valve sleeve	052-0294
5	1	Valve housing	052-7887
6	1	Valve housing cover	052-7888
7	1	Pin	304-3635
8	1	Buffer	307-2564
9	1	Ring	307-2516
10	1	O-ring	307-2477
11	1	Clamping flange	052-2504R
12	4	Screw	308-060450
14	2	Impact ring	307-2043
15	1	Complete handle	052-2550
16	1	Trigger	307-2556
17	1	Spring pin	304-3532
18	1	Valve	052-7532
19	1	Ball	307-2088
20	1	Plug	052-2510
21	1	Spring	304-7535
22	1	Threaded plug	318-0206 21 00
23	1	Silencer	307-2569
24	1	Clamping band	052-2509
25	3	Clamping fastener	306-0489
26	2	Clamping band	052-2513
27	2 m	Hose 13 × 5 mm	307-1502
28	1	Connector	306-0380
29	1	Hose ring	052-7809
30	1	Connector	052-7839
31	2	Hose clamp	306-0413
32	1	Fabric hose	052-7889
33	1	Complete connecting tube	052-2511
34	1	Complete hose	052-0296
35	1	Copper ring	307-1480
13	1	Complete screw cap	052-7878


NOTICE – Damage to the cylinder
Incorrect removal or replacement of the chisel bushing can damage the cylinder. Have chisel bushings replaced exclusively by F+K Service. Do not remove or replace them yourself.

NOTICE – Damage to the hammer
Reusing the old buffer when replacing the control housing cover can damage the hammer. Always replace buffer 307-2564 during this work.

Variants and spare-parts orders
Hose assembly 052-0296 (34): items 26–32 and two clamping fasteners (25); three clamping fasteners in total on the hammer.
Hose 307-1502: 2 m.

9 Exploded view FK 2008 R.30

FK 2008 R.30 · 052-640730 · R 25x75. Blue links open spare parts in the shop.

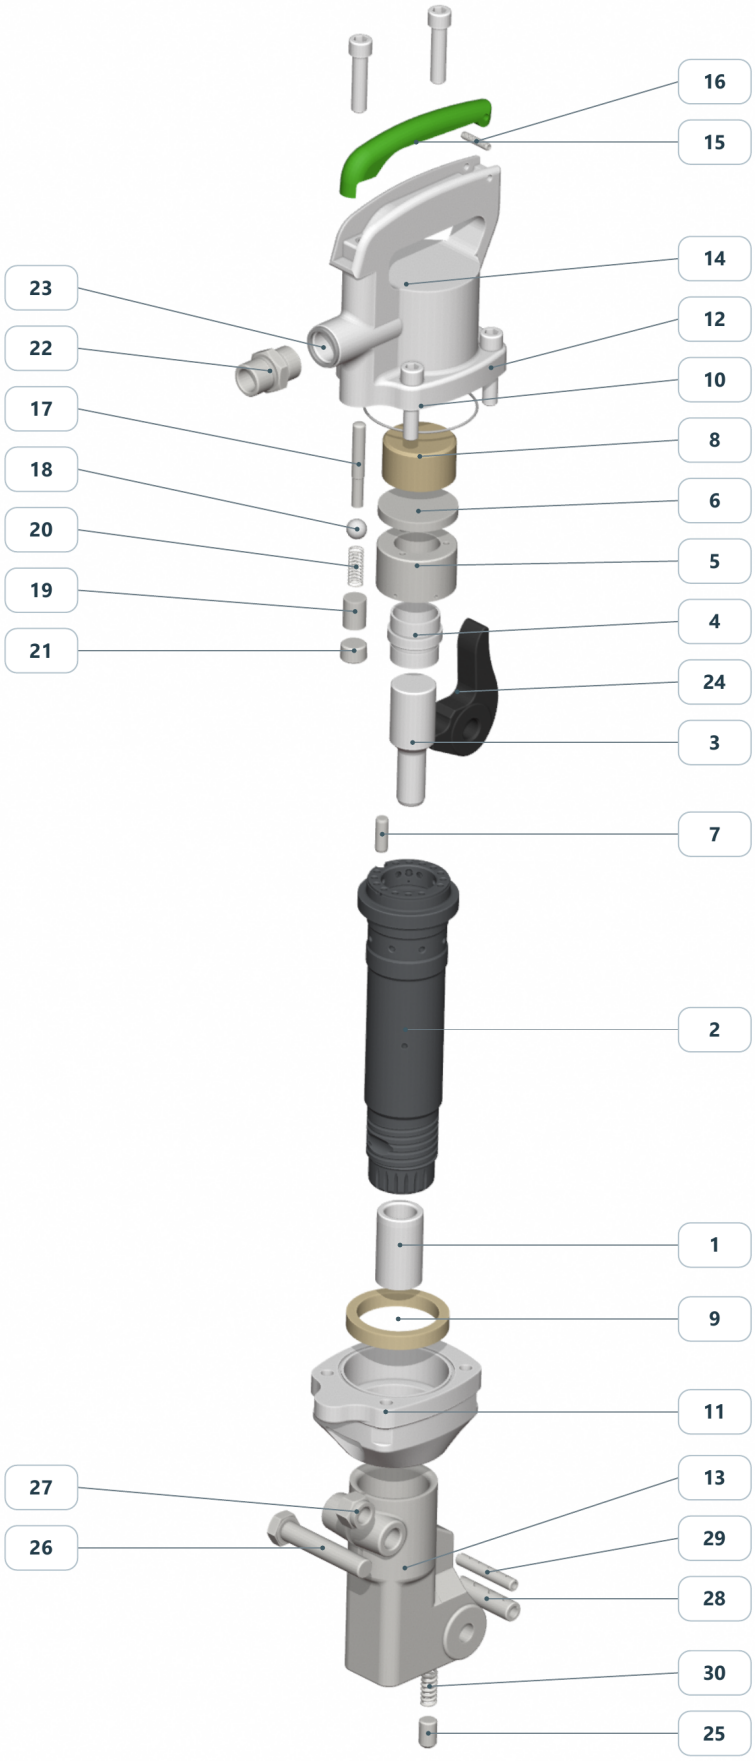

10 Spare parts

Item	Qty.	Description	Part number
1	1	Bushing	052-7872
2	1	Cylinder	052-7885
3	1	Piston	052-7886
4	1	Valve sleeve	052-0294
5	1	Valve housing	052-7887
6	1	Valve housing cover	052-7888
7	1	Pin	304-3635
8	1	Buffer	307-2564
9	1	Ring	307-2516
10	1	O-ring	307-2477
11	1	Clamping flange	052-2504R
12	4	Screw	308-060450
14	1	Complete handle	052-2550
15	1	Trigger	307-2556
16	1	Spring pin	304-3532
17	1	Valve	052-7532
18	1	Ball	307-2088
19	1	Plug	052-2510
20	1	Spring	304-7535
21	1	Threaded plug	318-0206 21 00
22	1	Nipple	306-0228
23	1	Sealing ring	313-531775
24	1	Retaining lever	052-2846
25	1	Pressure pin	052-8115
26	1	Screw	308-100105
27	1	Nut	308-110020
28	1	Spring pin	304-3654
29	1	Spring pin	304-3653
30	1	Spring	304-7501
13	1	Complete retaining cap	052-2507


NOTICE – Damage to the cylinder
Incorrect removal or replacement of the chisel bushing can damage the cylinder. Have chisel bushings replaced exclusively by F+K Service. Do not remove or replace them yourself.

NOTICE – Damage to the hammer
Reusing the old buffer when replacing the control housing cover can damage the hammer. Always replace buffer 307-2564 during this work.

Variants and spare-parts orders
Handle 052-2550 with rigid connection. Order parts using the article number of this version.

9 Exploded view FK 2008 R.31

FK 2008 R.31 · 052-640731 · R 25x75. Blue links open spare parts in the shop.

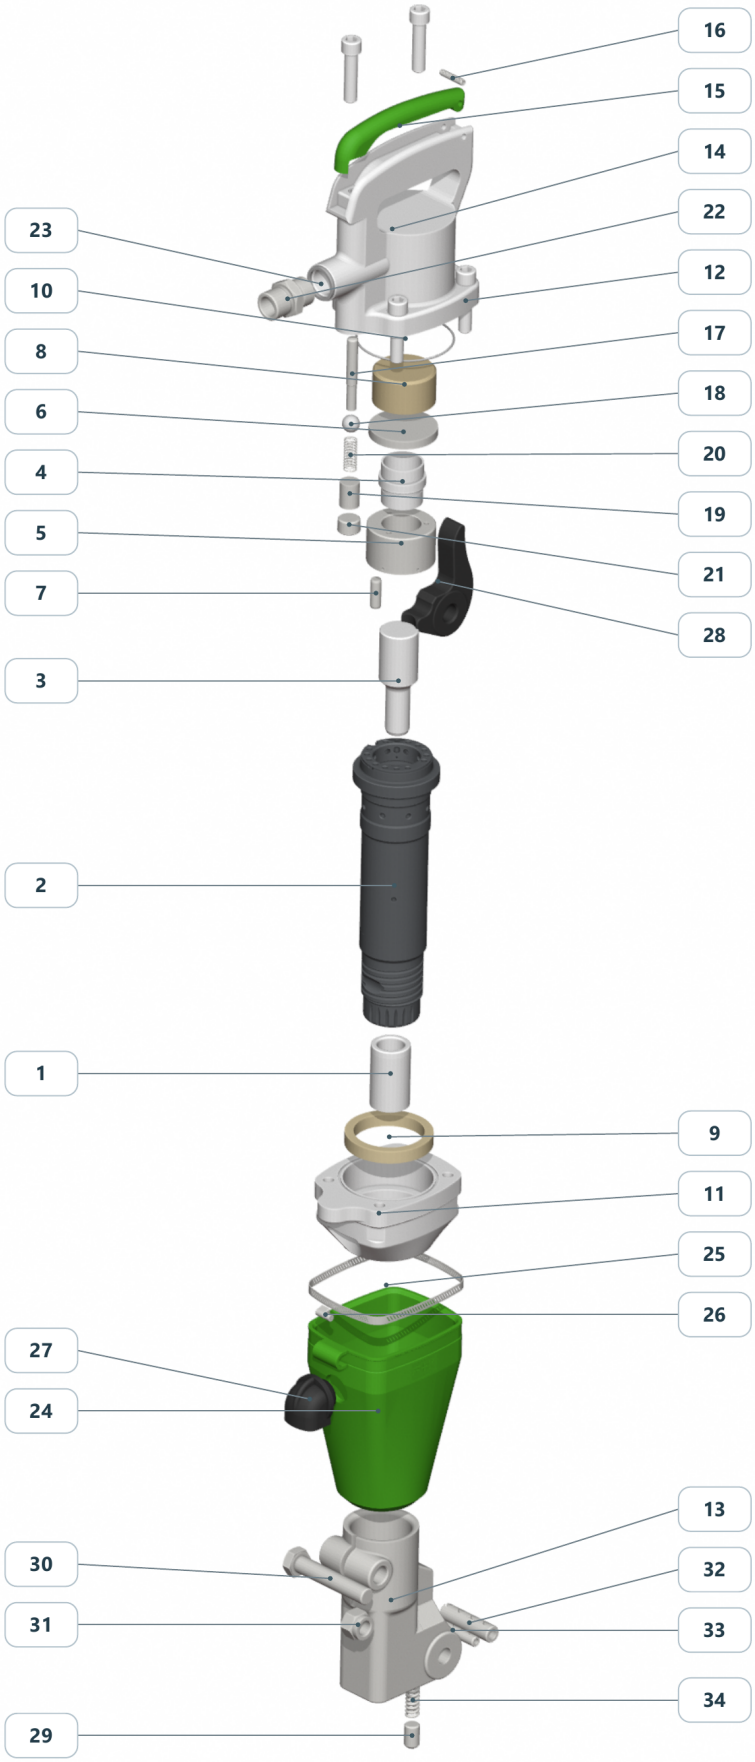

10 Spare parts

Item	Qty.	Description	Part number
1	1	Bushing	052-7872
2	1	Cylinder	052-7885
3	1	Piston	052-7886
4	1	Valve sleeve	052-0294
5	1	Valve housing	052-7887
6	1	Valve housing cover	052-7888
7	1	Pin	304-3635
8	1	Buffer	307-2564
9	1	Ring	307-2516
10	1	O-ring	307-2477
11	1	Clamping flange	052-2504R
12	4	Screw	308-060450
14	1	Complete handle	052-2550
15	1	Trigger	307-2556
16	1	Spring pin	304-3532
17	1	Valve	052-7532
18	1	Ball	307-2088
19	1	Plug	052-2510
20	1	Spring	304-7535
21	1	Plug	318-0206 21 00
22	1	Nipple	306-0228
23	1	Sealing ring	313-531775
24	1	Silencer	307-2569
25	1	Clamping band	052-2509
26	1	Clamping fastener	306-0489
27	1	Deflector	307-2573
28	1	Retaining lever	052-2846
29	1	Pressure pin	052-8115
30	1	Screw	308-100105
31	1	Nut	308-110020
32	1	Spring pin	304-3654
33	1	Spring pin	304-3653
34	1	Compression spring	304-7501
13	1	Complete retaining cap	052-2507


NOTICE – Damage to the cylinder
Incorrect removal or replacement of the chisel bushing can damage the cylinder. Have chisel bushings replaced exclusively by F+K Service. Do not remove or replace them yourself.

NOTICE – Damage to the hammer
Reusing the old buffer when replacing the control housing cover can damage the hammer. Always replace buffer 307-2564 during this work.

Variants and spare-parts orders
Handle 052-2550 with rigid connection. Order parts using the article number of this version.

9 Exploded view FK 2008 R.40

FK 2008 R.40 · 052-640740 · S 22 x 82.5. Blue links open spare parts in the shop.

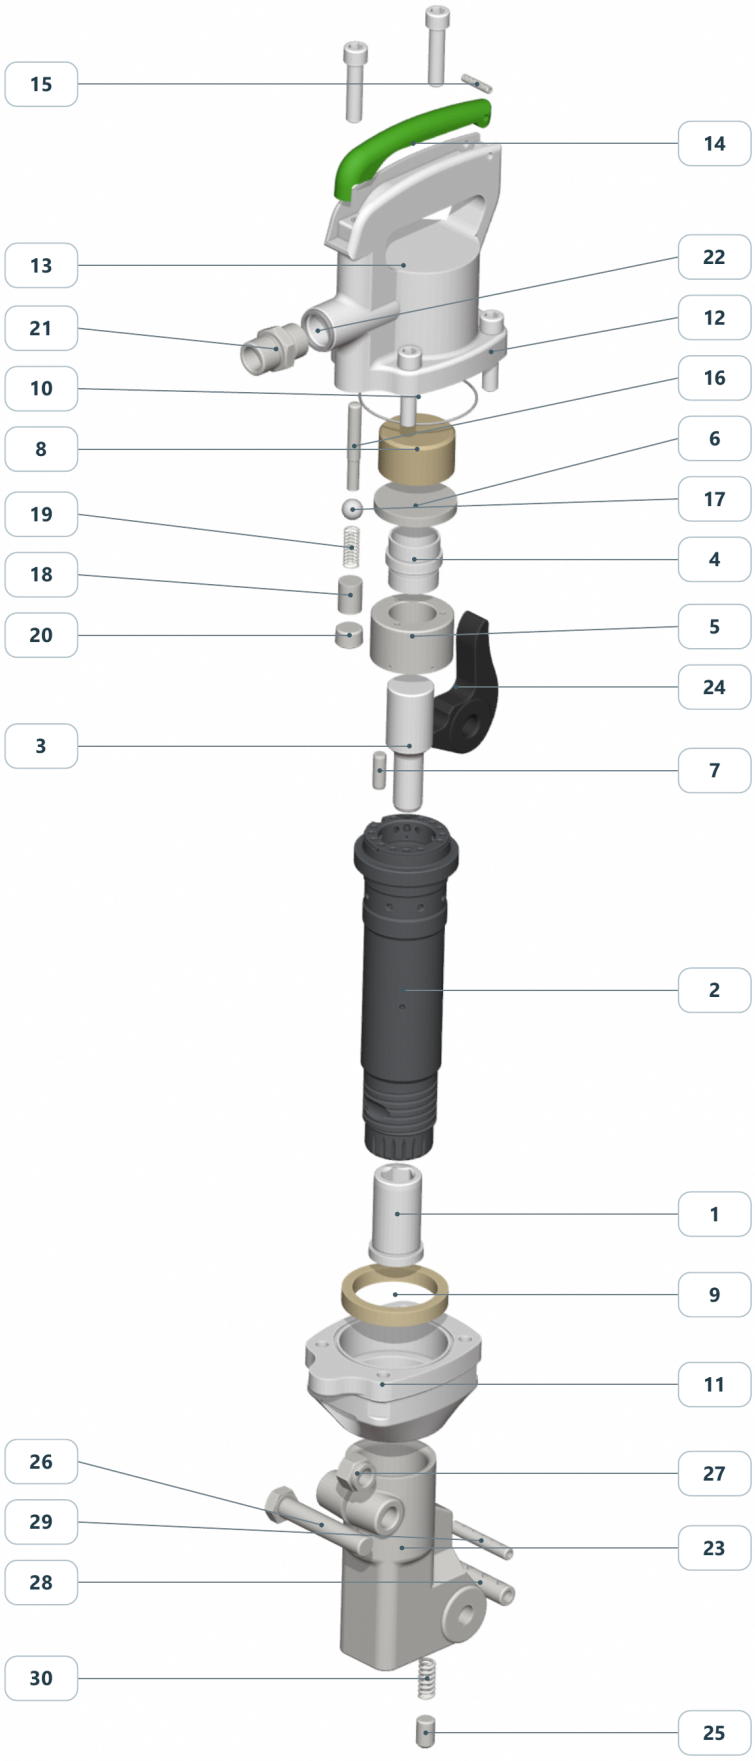

10 Spare parts

Item	Qty.	Description	Part number
1	1	Bushing	052-7504
2	1	Cylinder	052-7885
3	1	Piston	052-7886
4	1	Valve sleeve	052-0294
5	1	Valve housing	052-7887
6	1	Valve housing cover	052-7888
7	1	Pin	304-3635
8	1	Buffer	307-2564
9	1	Ring	307-2516
10	1	O-ring	307-2477
11	1	Clamping flange	052-2504R
12	4	Screw	308-060450
13	1	Complete handle	052-2550
14	1	Trigger	307-2556
15	1	Spring pin	304-3532
16	1	Valve	052-7532
17	1	Ball	307-2088
18	1	Plug	052-2510
19	1	Spring	304-7535
20	1	Plug	318-0206 21 00
21	1	Nipple	306-0228
22	1	Sealing ring	313-531775
24	1	Retaining lever	052-2846
25	1	Pressure pin	052-8115
26	1	Screw	308-100105
27	1	Nut	308-110020
28	1	Spring pin	304-3654
29	1	Spring pin	304-3653
30	1	Spring	304-7501
23	1	Complete retaining cap	052-2507


NOTICE – Damage to the cylinder
Incorrect removal or replacement of the chisel bushing can damage the cylinder. Have chisel bushings replaced exclusively by F+K Service. Do not remove or replace them yourself.

NOTICE – Damage to the hammer
Reusing the old buffer when replacing the control housing cover can damage the hammer. Always replace buffer 307-2564 during this work.

Variants and spare-parts orders
Handle 052-2550 with rigid connection. Order parts using the article number of this version.

9 Exploded view FK 2008 R.41

FK 2008 R.41 · 052-640741 · S 22 x 82.5. Blue links open spare parts in the shop.

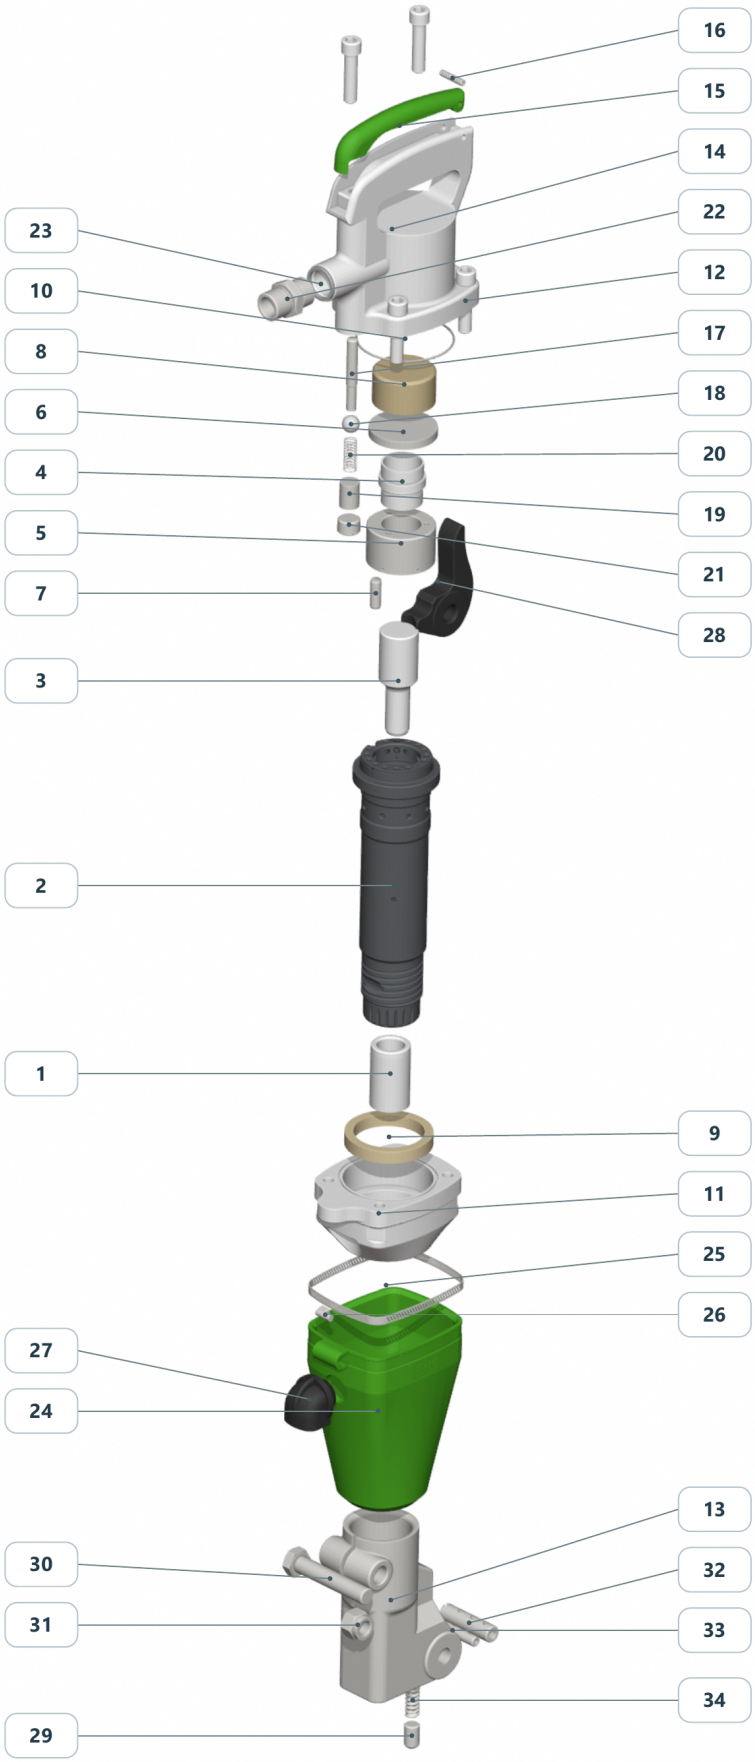

10 Spare parts

Item	Qty.	Description	Part number
1	1	Bushing	052-7504
2	1	Cylinder	052-7885
3	1	Piston	052-7886
4	1	Valve sleeve	052-0294
5	1	Valve housing	052-7887
6	1	Valve housing cover	052-7888
7	1	Pin	304-3635
8	1	Buffer	307-2564
9	1	Ring	307-2516
10	1	O-ring	307-2477
11	1	Clamping flange	052-2504R
12	4	Screw	308-060450
14	1	Complete handle	052-2550
15	1	Trigger	307-2556
16	1	Spring pin	304-3532
17	1	Valve	052-7532
18	1	Ball	307-2088
19	1	Plug	052-2510
20	1	Spring	304-7535
21	1	Plug	318-0206 21 00
22	1	Nipple	306-0228
23	1	Sealing ring	313-531775
24	1	Silencer	307-2569
25	1	Clamping band	052-2509
26	1	Clamping fastener	306-0489
27	1	Deflector	307-2573
28	1	Retaining lever	052-2846
29	1	Pressure pin	052-8115
30	1	Screw	308-100105
31	1	Nut	308-110020
32	1	Spring pin	304-3654
33	1	Spring pin	304-3653
34	1	Compression spring	304-7501
13	1	Complete retaining cap	052-2507


NOTICE – Damage to the cylinder
Incorrect removal or replacement of the chisel bushing can damage the cylinder. Have chisel bushings replaced exclusively by F+K Service. Do not remove or replace them yourself.

NOTICE – Damage to the hammer
Reusing the old buffer when replacing the control housing cover can damage the hammer. Always replace buffer 307-2564 during this work.

Variants and spare-parts orders
Handle 052-2550 with rigid connection. Order parts using the article number of this version.

9 Exploded view FK 2008 R.70

FK 2008 R.70 · 052-640770 · S 22 x 82.5. Blue links open spare parts in the shop.

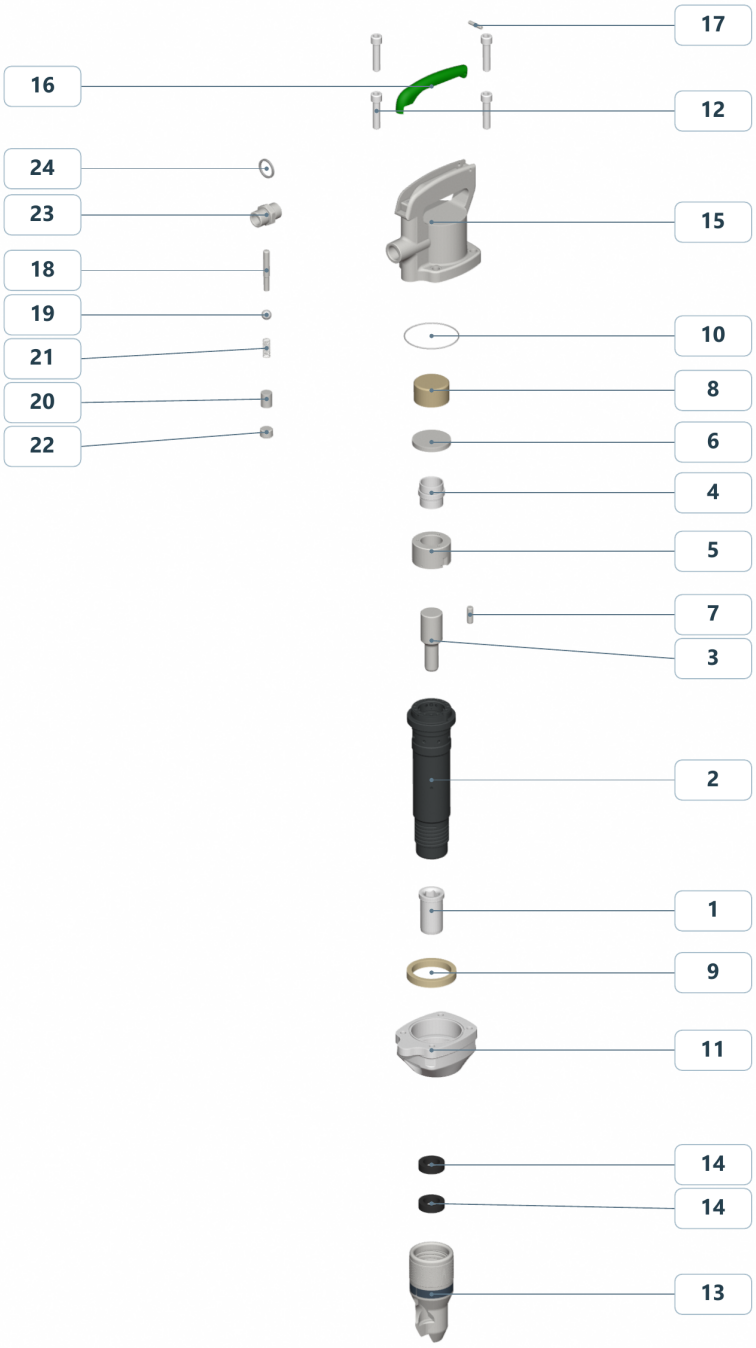

10 Spare parts

Item	Qty.	Description	Part number
1	1	Bushing	052-7504
2	1	Cylinder	052-7885
3	1	Piston	052-7886
4	1	Valve sleeve	052-0294
5	1	Valve housing	052-7887
6	1	Valve housing cover	052-7888
7	1	Pin	304-3635
8	1	Buffer	307-2564
9	1	Ring	307-2516
10	1	O-ring	307-2477
11	1	Clamping flange	052-2504R
12	4	Screw	308-060450
14	2	Impact ring	307-2043
15	1	Complete handle	052-2550
16	1	Trigger	307-2556
17	1	Spring pin	304-3532
18	1	Valve	052-7532
19	1	Ball	307-2088
20	1	Plug	052-2510
21	1	Spring	304-7535
22	1	Plug	318-0206 21 00
23	1	Nipple	306-0228
24	1	Sealing ring	313-531775
13	1	Complete screw cap	052-7880


NOTICE – Damage to the cylinder
Incorrect removal or replacement of the chisel bushing can damage the cylinder. Have chisel bushings replaced exclusively by F+K Service. Do not remove or replace them yourself.

NOTICE – Damage to the hammer
Reusing the old buffer when replacing the control housing cover can damage the hammer. Always replace buffer 307-2564 during this work.

Variants and spare-parts orders
Handle 052-2550 with rigid connection. Order parts using the article number of this version.

9 Exploded view FK 2008 R.71

FK 2008 R.71 · 052-640771 · S 22 x 82.5. Blue links open spare parts in the shop.

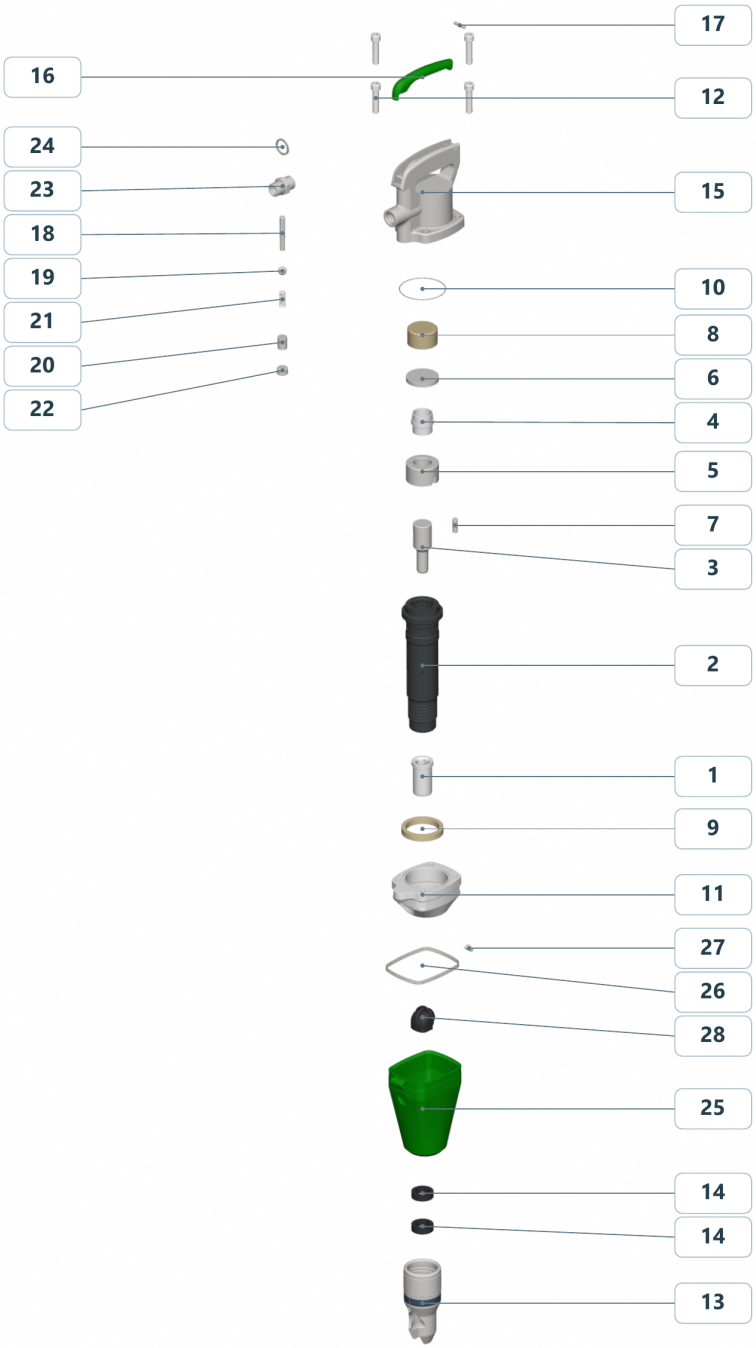

10 Spare parts

Item	Qty.	Description	Part number
1	1	Bushing	052-7504
2	1	Cylinder	052-7885
3	1	Piston	052-7886
4	1	Valve sleeve	052-0294
5	1	Valve housing	052-7887
6	1	Valve housing cover	052-7888
7	1	Pin	304-3635
8	1	Buffer	307-2564
9	1	Ring	307-2516
10	1	O-ring	307-2477
11	1	Clamping flange	052-2504R
12	4	Screw	308-060450
14	2	Impact ring	307-2043
15	1	Complete handle	052-2550
16	1	Trigger	307-2556
17	1	Spring pin	304-3532
18	1	Valve	052-7532
19	1	Ball	307-2088
20	1	Plug	052-2510
21	1	Spring	304-7535
22	1	Plug	318-0206 21 00
23	1	Nipple	306-0228
24	1	Sealing ring	313-531775
25	1	Silencer	307-2569
26	1	Clamping band	052-2509
27	1	Clamping fastener	306-0489
28	1	Deflector	307-2573
13	1	Complete screw cap	052-7880


NOTICE – Damage to the cylinder
Incorrect removal or replacement of the chisel bushing can damage the cylinder. Have chisel bushings replaced exclusively by F+K Service. Do not remove or replace them yourself.

NOTICE – Damage to the hammer
Reusing the old buffer when replacing the control housing cover can damage the hammer. Always replace buffer 307-2564 during this work.

Variants and spare-parts orders
Handle 052-2550 with rigid connection. Order parts using the article number of this version.

9 Exploded view FK 2008 R.72

FK 2008 R.72 · 052-640772 · S 22 x 82.5. Blue links open spare parts in the shop.

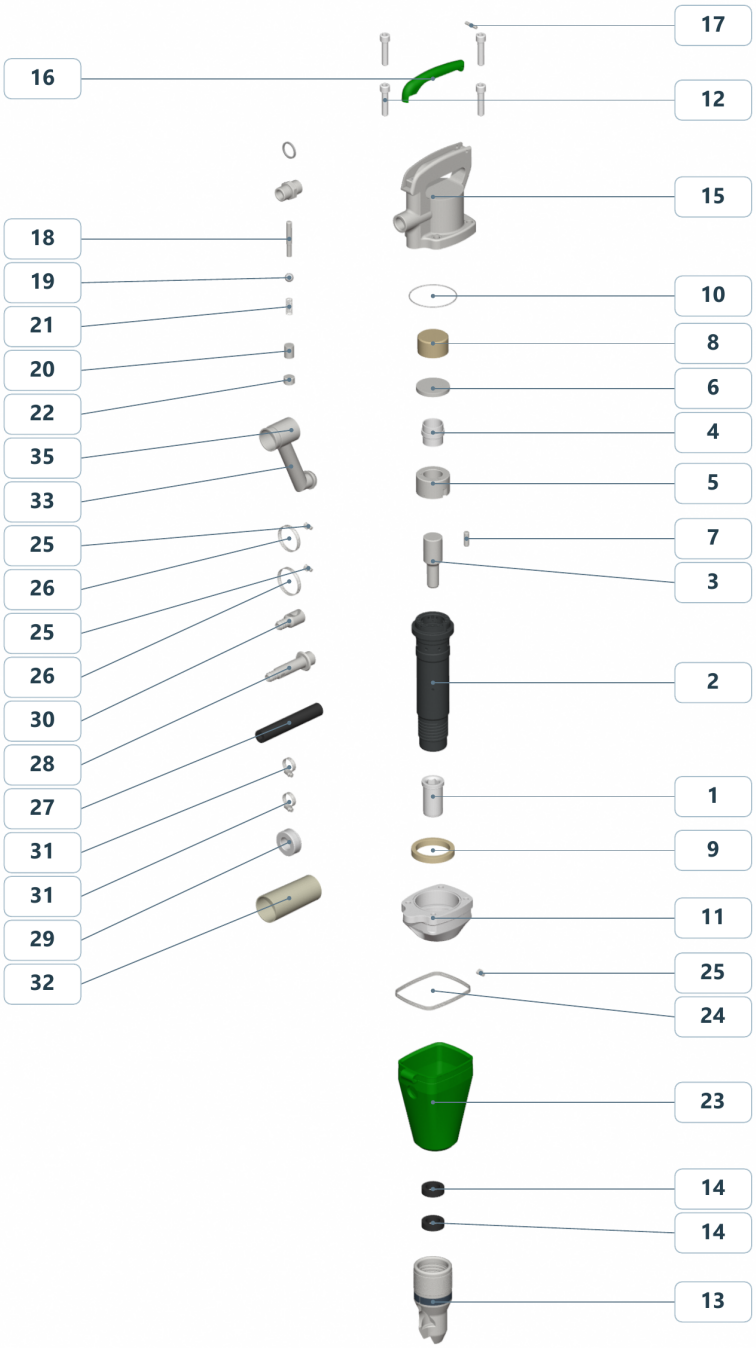

34 = complete hose: 26–32 and 2 × clamping fastener 25.
Flexible hoses shown shortened.

10 Spare parts

Item	Qty.	Description	Part number
1	1	Bushing	052-7504
2	1	Cylinder	052-7885
3	1	Piston	052-7886
4	1	Valve sleeve	052-0294
5	1	Valve housing	052-7887
6	1	Valve housing cover	052-7888
7	1	Pin	304-3635
8	1	Buffer	307-2564
9	1	Ring	307-2516
10	1	O-ring	307-2477
11	1	Clamping flange	052-2504R
12	4	Screw	308-060450
14	2	Impact ring	307-2043
15	1	Complete handle	052-2550
16	1	Trigger	307-2556
17	1	Spring pin	304-3532
18	1	Valve	052-7532
19	1	Ball	307-2088
20	1	Plug	052-2510
21	1	Spring	304-7535
22	1	Threaded plug	318-0206 21 00
23	1	Silencer	307-2569
24	1	Clamping band	052-2509
25	3	Clamping fastener	306-0489
26	2	Clamping band	052-2513
27	2 m	Hose 13 × 5 mm	307-1502
28	1	Connector	306-0380
29	1	Hose ring	052-7809
30	1	Connector	052-7839
31	2	Hose clamp	306-0413
32	1	Fabric hose	052-7889
33	1	Complete connecting tube	052-2511
34	1	Complete hose	052-0296
35	1	Copper ring	307-1480
13	1	Complete screw cap	052-7880

NOTICE – Damage to the cylinder
Incorrect removal or replacement of the chisel bushing can damage the cylinder. Have chisel bushings replaced exclusively by F+K Service. Do not remove or replace them yourself.

NOTICE – Damage to the hammer
Reusing the old buffer when replacing the control housing cover can damage the hammer. Always replace buffer 307-2564 during this work.

Variants and spare-parts orders
Hose assembly 052-0296 (34): items 26–32 and two clamping fasteners (25); three clamping fasteners in total on the hammer.
Hose 307-1502: 2 m.