
9 Exploded view FK 714.4

Schematic parts identification. Blue links open spare parts in the shop.

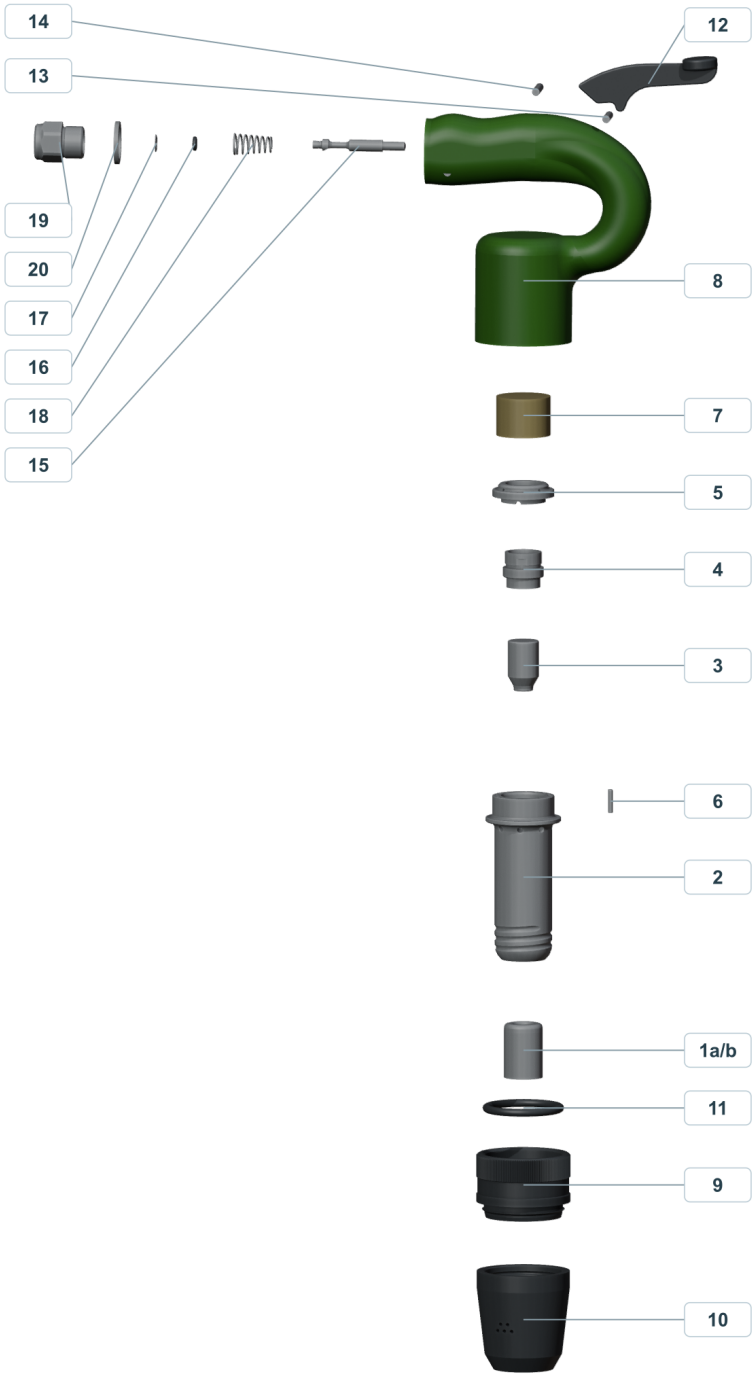

10 Spare parts

Item	Qty.	Description	Part number
1a	1	Bushing R 10.3 × 36	052-7233
1b	1	Bushing R 10.0	052-7235
2	1	Cylinder	052-0173
3	1	Piston	052-0352
4	1	Valve sleeve	052-0354
5	1	Cylinder cover	052-0343
6	1	Pin	304-3431
7	1	Buffer	307-2541
8	1	Complete handle	052-0300
9	1	Clamping nut	052-0058
10	1	Silencer	307-2540
11	1	O-ring	307-2439
12	1	Trigger	052-0309
13	1	Pin	303-1272
14	1	Pin	303-1273
15	1	Valve	052-0305
16	1	O-ring	307-2445
17	1	Serrated ring	304-5292
18	1	Compression spring	304-7103
19	1	Nipple	052-0219
20	1	Sealing ring OK-3/8	313-531773
21	1	Hose without coupling	330-0160
22	1	Coupling	306-0805

NOTICE – Damage to the cylinder
Incorrect removal or replacement of the chisel bushing can damage the cylinder. Have chisel bushings replaced exclusively by F+K Service. Do not remove or replace them yourself.

NOTICE – Damage to the hammer
Reusing the old buffer when replacing the upper cover, lower cover or control plate can damage the hammer. Always replace buffer 307-2541 during this work.

Variants and spare-parts orders
Bushing 052-7233 for R 10.3 × 36. Older R 10.0 bushing 052-7235 is only a spare-part alternative; these instructions apply to article 052-60920. Nipple 052-0219 on the handle as shown in the drawing. Handle (8) is also available complete (052-0300). Connection accessories not illustrated: hose (21) and coupling (22).