
Rust scaler – RK 1

Exploded view and spare parts

Part numbers and quantities according to approved parts list F01.

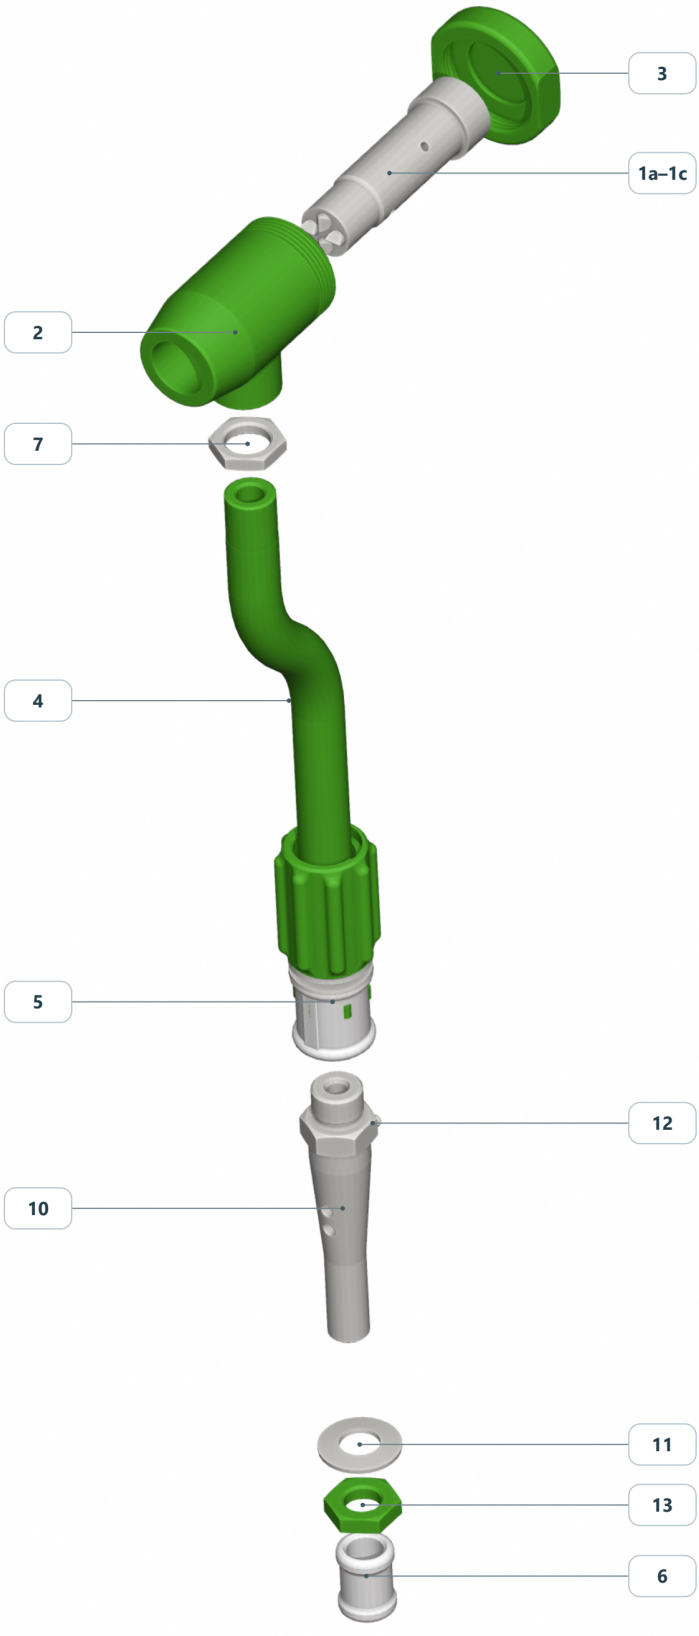

Pos.	Qty.	Description	Order number
1a	1	Piston	052-1502
1b	1	Piston	052-1540
1c	1	Piston	052-1572
2	1	Cylinder	052-1501
3	1	Cover	052-1503
4	1	Tube	052-1514
5	1	Socket	304-6106
6	1	Socket	304-6104
7	1	Nut	304-7348
8	1	Complete rotary valve	052-0494
9	1	Rotary valve sleeve	052-2293
10	1	Rotary valve stem	052-2294
11	1	Disc spring	304-7127
12	1	Slotted spring pin	304-3506
13	1	Nut	304-7347

CAD view. Not all listed items are shown separately; see inspection report.

Shared view with RK 1 H; the parts list applies to the specified tool.

Blue order numbers open the spare part in the shop.

Frölich & Klüpfel Drucklufttechnik GmbH & Co. KG | info@froelich-kluepfel.de

When replacing the valve assembly (upper cover, lower cover and valve plate), always replace the buffer as well!