
# 9 Exploded views ST 38 P

ST 38 P – article 052-5490. Dedicated exploded view for part identification; not a dimensioned drawing. Blue part numbers open the shop.

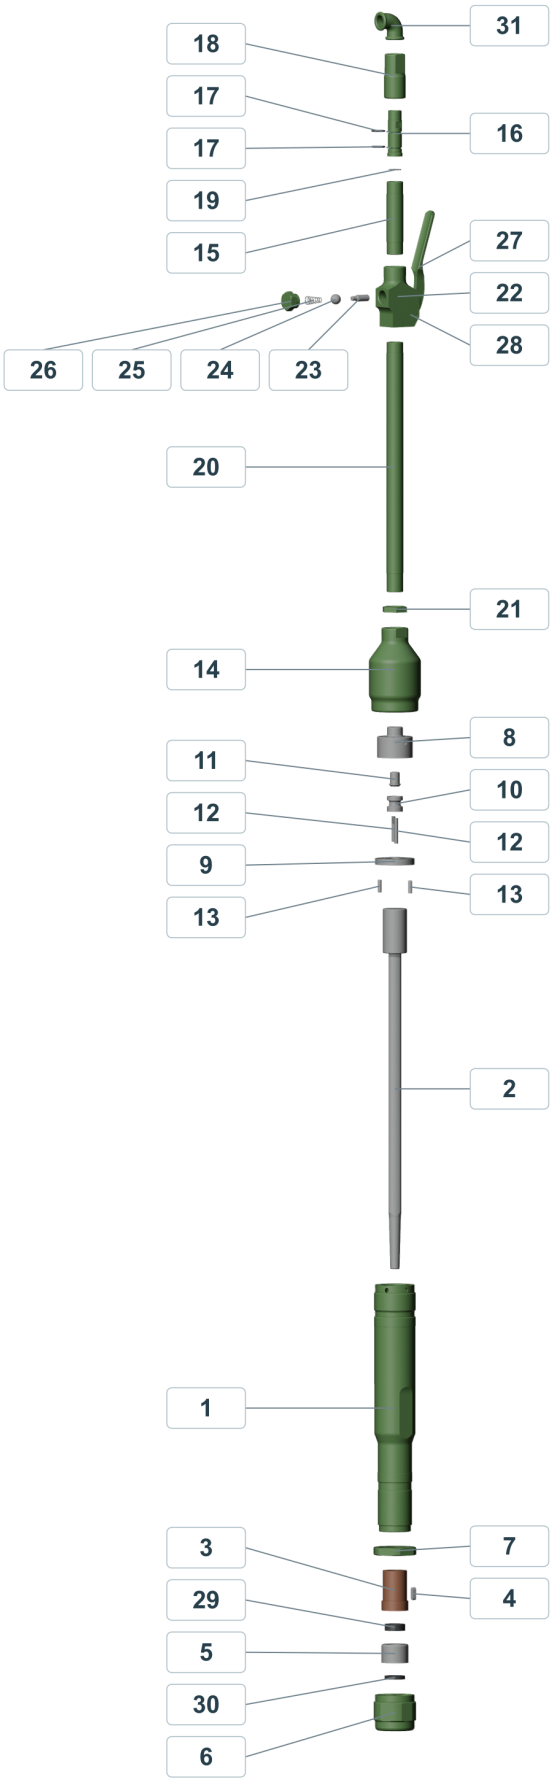


## 10 Spare parts

| Item | Qty. | Description | Part number |
|---|---|---|---|
| 1 | 1 | Cylinder | 052-2901 |
| 2 | 1 | Piston rod | 052-2902 |
| 3 | 1 | Guide bushing | 052-2903 |
| 4 | 1 | Parallel key | 304-4534 |
| 5 | 1 | Support ring | 052-2904 |
| 6 | 1 | Threaded fitting | 052-2905 |
| 7 | 1 | Nut | 052-2906 |
| 8 | 1 | Valve housing | 052-2907 |
| 9 | 1 | Intermediate washer | 052-2908 |
| 10 | 1 | Control valve | 052-2909 |
| 11 | 1 | Pressure valve | 052-2910 |
| 12 | 2 | Pin | 052-2911 |
| 13 | 2 | Pin | 304-3443 |
| 14 | 1 | Hood | 052-2913 |
| 15 | 1 | Support tube | 052-7428 |
| 16 | 1 | Pivot pin | 052-2254 |
| 17 | 2 | O-ring | 307-2154 |
| 18 | 1 | Pin guide | 052-2255 |
| 19 | 1 | Strainer | 304-5066 |
| 20 | 1 | Lower support tube | 052-0465 |
| 21 | 1 | Nut | 304-7339 |
| 22 | 1 | Complete lever valve | 052-7424 |
| 23 | 1 | Valve pin | 052-7427 |
| 24 | 1 | Ball | 307-2088 |
| 25 | 1 | Spring | 304-7044 |
| 26 | 1 | Plug | 306-0267 |
| 27 | 1 | Lever | 052-0429 |
| 28 | 1 | Pin | 304-3442 |
| 29 | 1 | Seal | 307-2306 |
| 30 | 1 | Scraper ring | 307-2307 |
| 31 | 1 | Elbow | 304-6076 |

**Variants and spare-parts orders**
Polygonal piston rod (2) with parallel key (4), MK 2 socket. Two O-rings (17) on pivot pin (16). Lever valve (22, 052-7424) is also available complete. Supplied without rammer foot. When ordering, state ST 38 P, article 052-5490, and the spare-part number.