
9 Exploded view FK 102.4 SK

FK 102.4 SK: schematic view for identifying parts, not a scale drawing. The parts list for this version is authoritative. Blue article numbers open the shop.

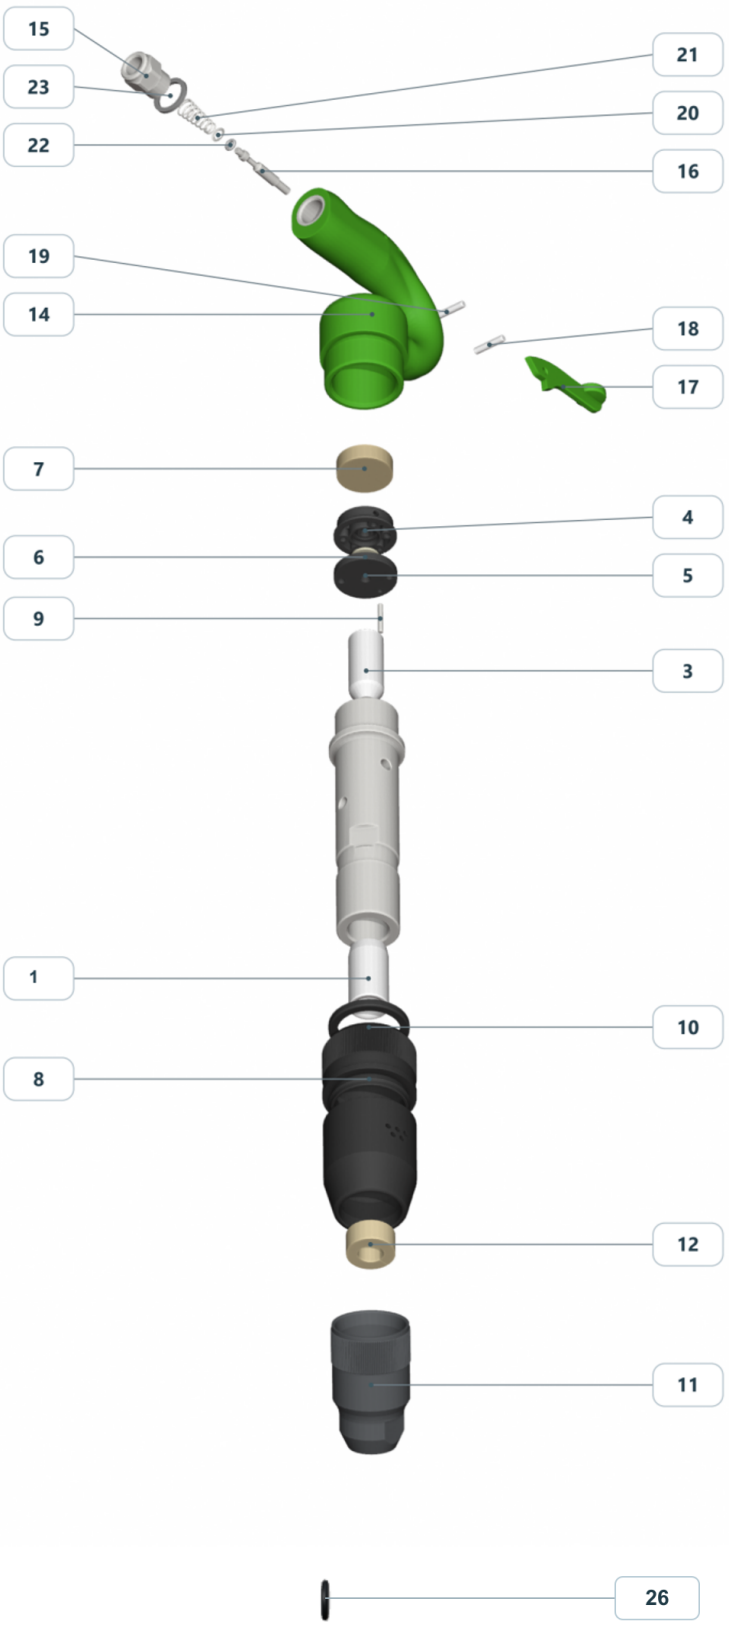

Valve bushing 25 and O-ring 26 in handle 14; shown separately.

10 Spare parts

Item	Qty.	Description	Part number
1	1	Bush RS 14.3	052-8248
2	1	Cylinder	052-0024S
3	1	Piston	052-0025
4	1	Upper cover	052-0052
5	1	Lower cover	052-0053
6	1	Valve plate	307-2501
7	1	Buffer	307-2503
8	1	Clamping nut	052-0101
9	1	Pin	304-5646
10	1	Ring	307-2560
11	1	Screw cap	052-008015
12	1	Impact ring	052-008052
13	1	Silencer	052-008053
14	1	Complete handle	052-0301
15	1	Nipple	052-0219
16	1	Valve	052-0305
17	1	Trigger	052-0309
18	1	Pin	303-1272
19	1	Pin	303-1273
20	1	Serrated ring	304-5292
21	1	Spring	304-7103
22	1	O-ring	307-2445
23	1	Sealing ring OK-3/8	313-531773
25	1	Valve bushing	052-0308
26	1	O-ring	307-2152

NOTICE – Damage to the cylinder
Incorrect removal or replacement of the chisel bushing can damage the cylinder. Have chisel bushings replaced exclusively by F+K Service. Do not remove or replace them yourself.

NOTICE – Damage to the hammer
Reusing the old buffer when replacing the upper cover, lower cover or valve plate can damage the hammer. Always replace buffer 307-2503 during this work.

Variants and spare-parts orders
052-51532: bush 1 for RS 14.3, article 052-8248. Use screw cap 11 with one impact ring 12. Sealing ring 23 (313-531773) belongs to nipple 15; valve bush 25 (052-0308) belongs to handle 14. State article number and shank when ordering.