
9 Exploded view FK 102.5

FK 102.5: Schematic view for parts identification, not a dimensional drawing. Blue links open the corresponding shop article.

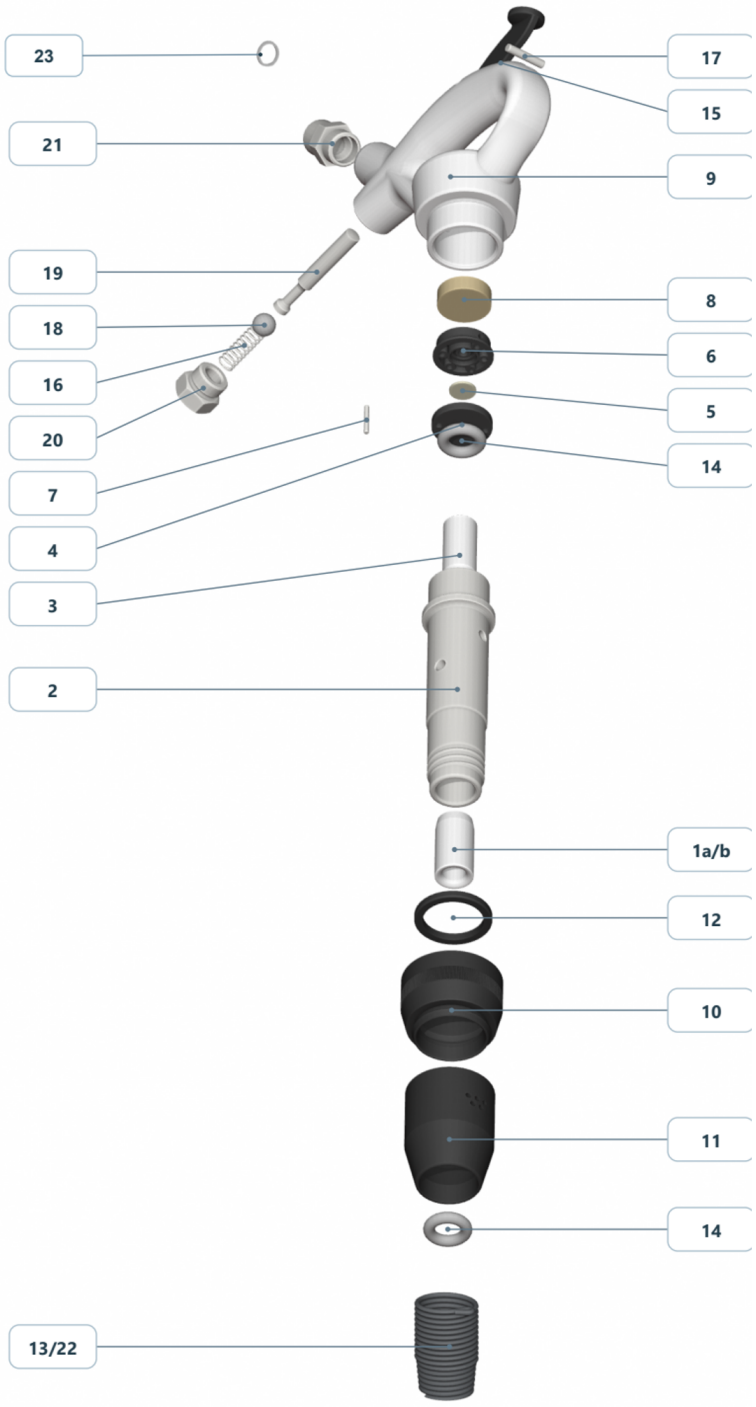

10 Spare parts

Item	Qty.	Description	Part number
1a	1	Bushing	052-8247
1b	1	Bushing	052-8248
2	1	Cylinder	052-0024
3	1	Piston	052-0025
4	1	Lower cover	052-0053
5	1	Valve plate	307-2501
6	1	Upper cover	052-0052
7	1	Pin	304-5646
8	1	Buffer	307-2503
9	1	Complete handle	052-0095
10	1	Clamping nut	052-0103
11	1	Silencer	307-2539
12	1	Ring	307-2560
13	1	Spring cap	304-7803
14	2	O-ring	307-2079
15	1	Trigger	052-0057
16	1	Spring	304-7018
17	1	Pin	304-3442
18	1	Ball	307-1987
19	1	Valve	052-0116
20	1	Plug	306-0202
21	1	Nipple	306-0223
22	1	Spring cap	304-7804
23	1	Sealing ring OK-1/2	313-531774

NOTICE – Damage to the cylinder
Incorrect removal or replacement of the chisel bushing can damage the cylinder. Have chisel bushings replaced exclusively by F+K Service. Do not remove or replace them yourself.

NOTICE – Damage to the hammer
Reusing the old buffer when replacing the upper cover, lower cover or valve plate can damage the hammer. Always replace buffer 307-2503 during this work. Replace upper cover, lower cover and valve plate together.

Variants and spare-parts orders
052-51260: bush 1a; 052-51261: bush 1b. Spring cap 13 and both O-rings 14 apply to both versions. Spring cap 22 is the alternative for chisel cutting edges of 40 mm or more. State tool type, article number and shank when ordering.

23: Sealing ring at nipple 21, shown separately; part of handle 9.