
9 Exploded view FK 102 G

FK 102 G: Schematic comparison view based on FK 103 G for identifying parts, not a scale drawing. The adjacent list applies to FK 102 G. Blue links open the relevant article in the shop.

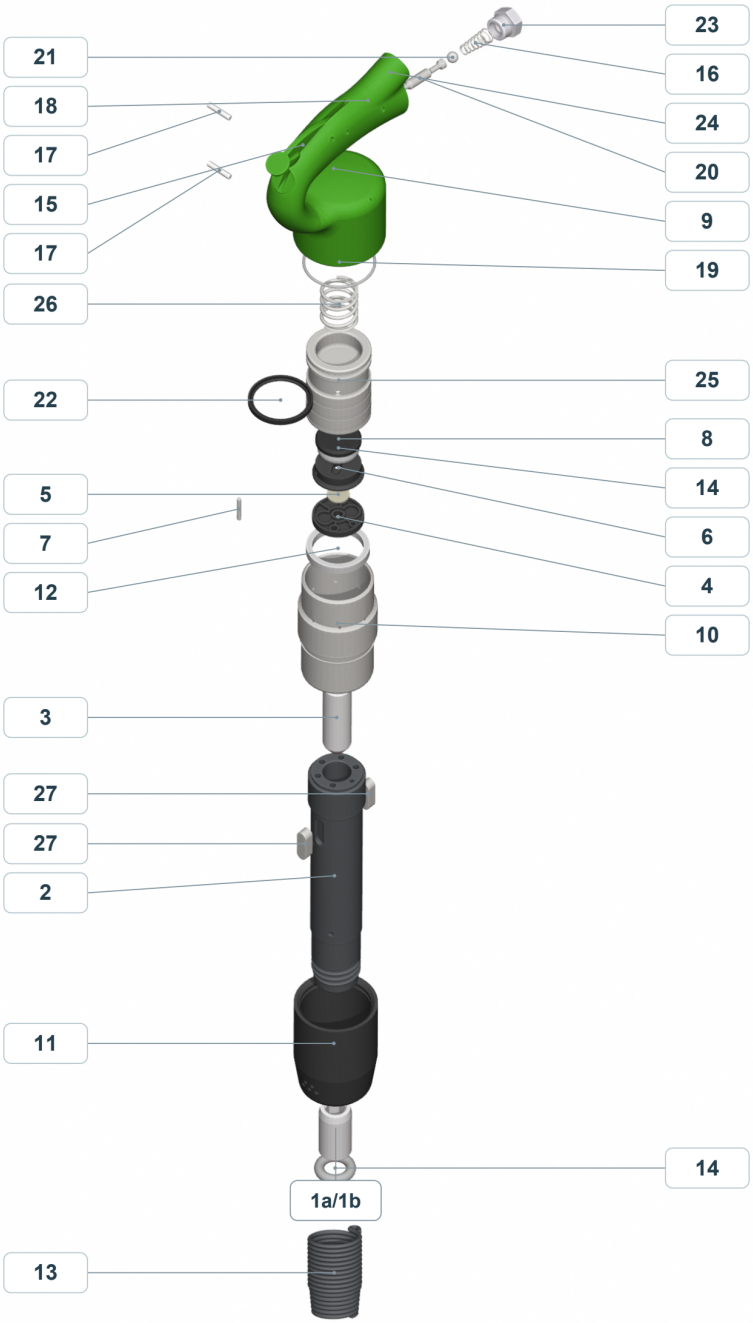

10 Spare parts

Item	Qty.	Description	Part number
1a	1	Bushing	052-8247
1b	1	Bushing	052-8248
2	1	Cylinder	052-0319
3	1	Piston	052-0025
4	1	Lower cover	052-0053
5	1	Valve plate	307-2501
6	1	Upper cover	052-0052
7	1	Pin	304-5646
8	1	Buffer	052-0322
9	1	Complete handle	052-0302
10	1	Cylinder hood	052-0327
11	1	Silencer	052-0316
12	1	Ring	307-2530
13	1	Spring cap	304-7804
14	2	O-ring	307-2079
15	1	Trigger	052-0312
16	1	Spring	304-7103
17	2	Pin	303-1272
18	1	Pin 4 × 23.8	303-1273
19	1	O-ring	307-2187
20	1	Valve	052-0743
21	1	Ball	307-2082
22	1	Seal kit	307-2190
23	1	Plug	052-0328
24	1	Threaded insert	304-2700
25	1	Hood	052-0326
26	1	Compression spring	304-7520
27	2	Parallel key	304-4557

NOTICE – Damage to the cylinder
Incorrect removal or replacement of the chisel bushing can damage the cylinder. Have chisel bushings replaced exclusively by F+K Service. Do not remove or replace them yourself.

NOTICE – Damage to the hammer
Reusing the old buffer when replacing the upper cover, lower cover or valve plate can damage the hammer. Always replace buffer 052-0322 during this work. Replace upper cover, lower cover and valve plate together.

Variants and spare-parts orders
052-51410: bush 1a; 052-51411: bush 1b. Spring cap 13 and both O-rings 14 apply to both versions. State the tool type, article number and shank when ordering. Handle 052-0302 can also be ordered complete and additionally includes strainer 304-5069 (not shown separately).