
9 Exploded view FK 113.2S

FK 113.2S: item numbers correspond to the version shown. Blue links open the corresponding shop article.

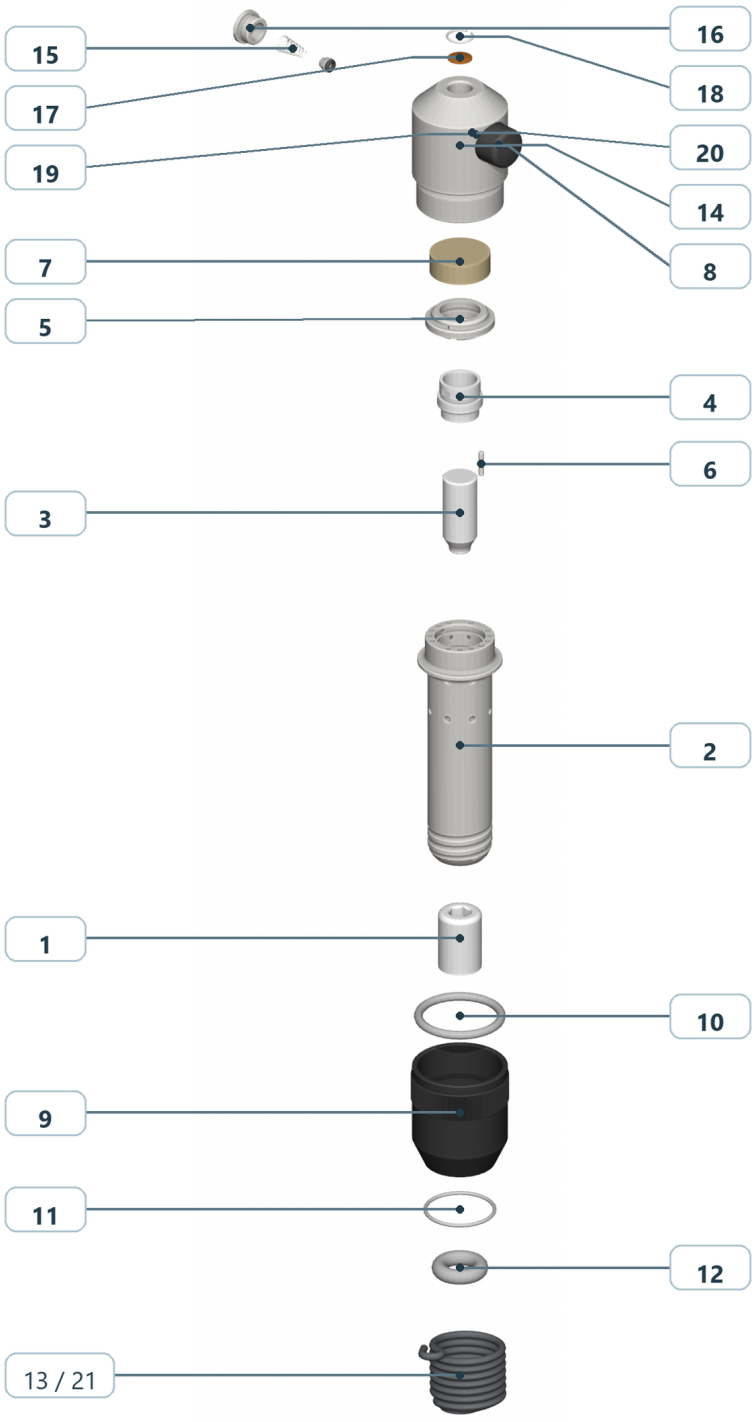

10 Spare parts

Item	Qty.	Description	Part number
1	1	Bush RS 9.5/11 × 36	052-0066
2	1	Cylinder	052-0183
3	1	Piston	052-0194
4	1	Valve sleeve	052-0354
5	1	Cylinder cover	052-0343
6	1	Pin	304-3431
7	1	Buffer	307-2338
8	1	Complete housing	052-0605
9	1	Clamping nut	052-0601
10	1	O-ring	307-2439
11	1	O-ring	307-2193
12	1	O-ring	307-2076
13	1	Spring cap	304-7806
14	1	Trigger	052-0146
15	1	Spring	304-7015
16	1	Plug	306-0200
17	1	Strainer	304-5069
18	1	Snap ring	304-5155
19	1	Complete valve	052-0142
20	1	Valve bush; ream to fit 5H7 after installation	052-0141
21	1	Spring cap for cutting edges from 40 mm	304-7807

NOTICE – Damage to the cylinder
Incorrect removal or replacement of the chisel bushing can damage the cylinder. Have chisel bushings replaced exclusively by F+K Service. Do not remove or replace them yourself.

NOTICE – Damage to the hammer
Reusing the existing buffer when replacing the control system can damage the hammer. Always replace buffer 307-2338 during this work.

Variants and spare-parts orders
Spring caps 13 and 21 are alternatives. Item 21 is intended for cutting edges from 40 mm wide. State tool type, article number and shank when ordering. See Chapter 6 for fitting the O-ring and spring cap. Replace worn buffers and O-rings in good time.