
9 Exploded view FK 2.3

Six variants · Part numbers open the shop.

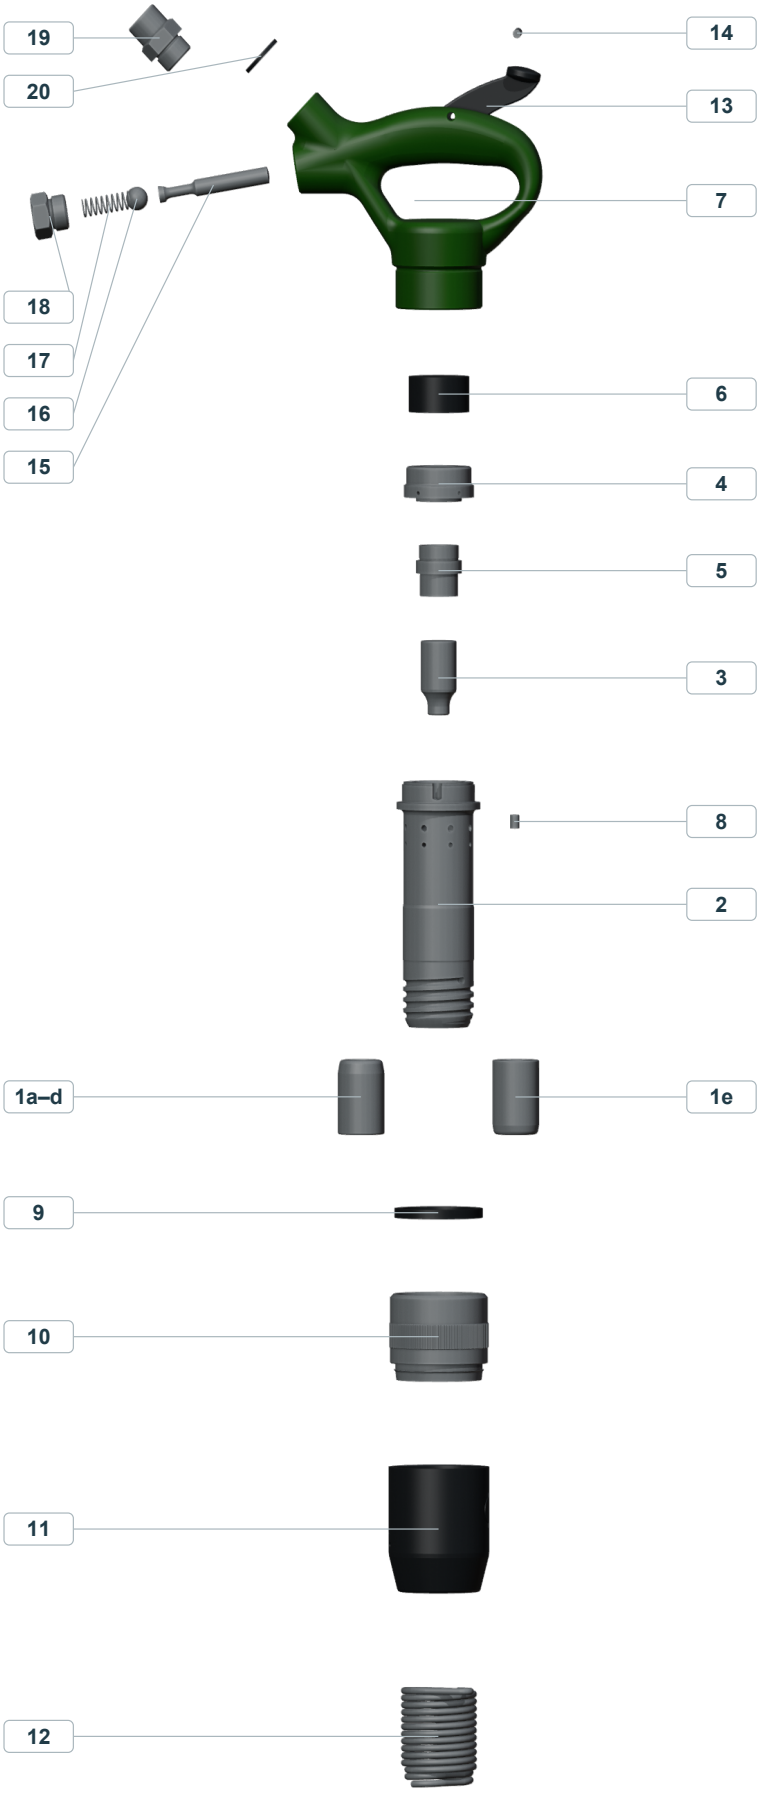

10 Spare parts

Item	Qty.	Description	Part number
1a	1	Bushing – RS 17,5	052-0501
1b	1	Bushing – R 17,5 × 60	052-0502
1c	1	Bushing – RS 20	052-0503
1d	1	Bushing – R 20 × 60	052-0504
1e	1	Bushing – RK 13	052-0514
2	1	Cylinder	052-0553
3	1	Piston	052-0382
4	1	Cylinder cover	052-0383
5	1	Valve sleeve	052-0384
6	1	Buffer	307-2505
7	1	Complete handle	052-0525
8	1	Cylindrical pin	303-1282
9	1	Ring	307-2559
10	1	Clamping nut	052-0527
11	1	Silencer	307-2538
12	1	Spring cap	304-7183
13	1	Trigger	052-0057
14	1	Pin	304-3442
15	1	Valve	052-0116
16	1	Ball	307-1987
17	1	Spring	304-7018
18	1	Plug	306-0202
19	1	Nipple	306-0223
20	1	Sealing ring	313-531774

NOTICE – Damage to the cylinder
Have chisel bushings replaced only by F+K Service. Incorrect removal or replacement can damage the cylinder. Do not remove or replace them yourself.

NOTICE – Damage to the hammer
Whenever the cylinder cover or valve sleeve is replaced, always replace buffer 307-2505 as well. Reusing the buffer can damage the hammer.

Variants and spare-parts orders
052-60521: 1a · 052-60522: 1b
052-60523: 1c · 052-60524: 1d
052-60528: 1e (RK 13)
052-6052: supplied without a bushing.
1a–d and 1e are alternatives fitted in the same position. Use only one suitable bushing. Have it installed by F+K Service before operation.
Handle (7) is also available complete: 052-0525.