
9 Exploded view FK 3.3

FK 3.3: Schematic exploded view for identifying parts, not a scale drawing. The article numbers in the parts list are authoritative. Blue article numbers open the shop.

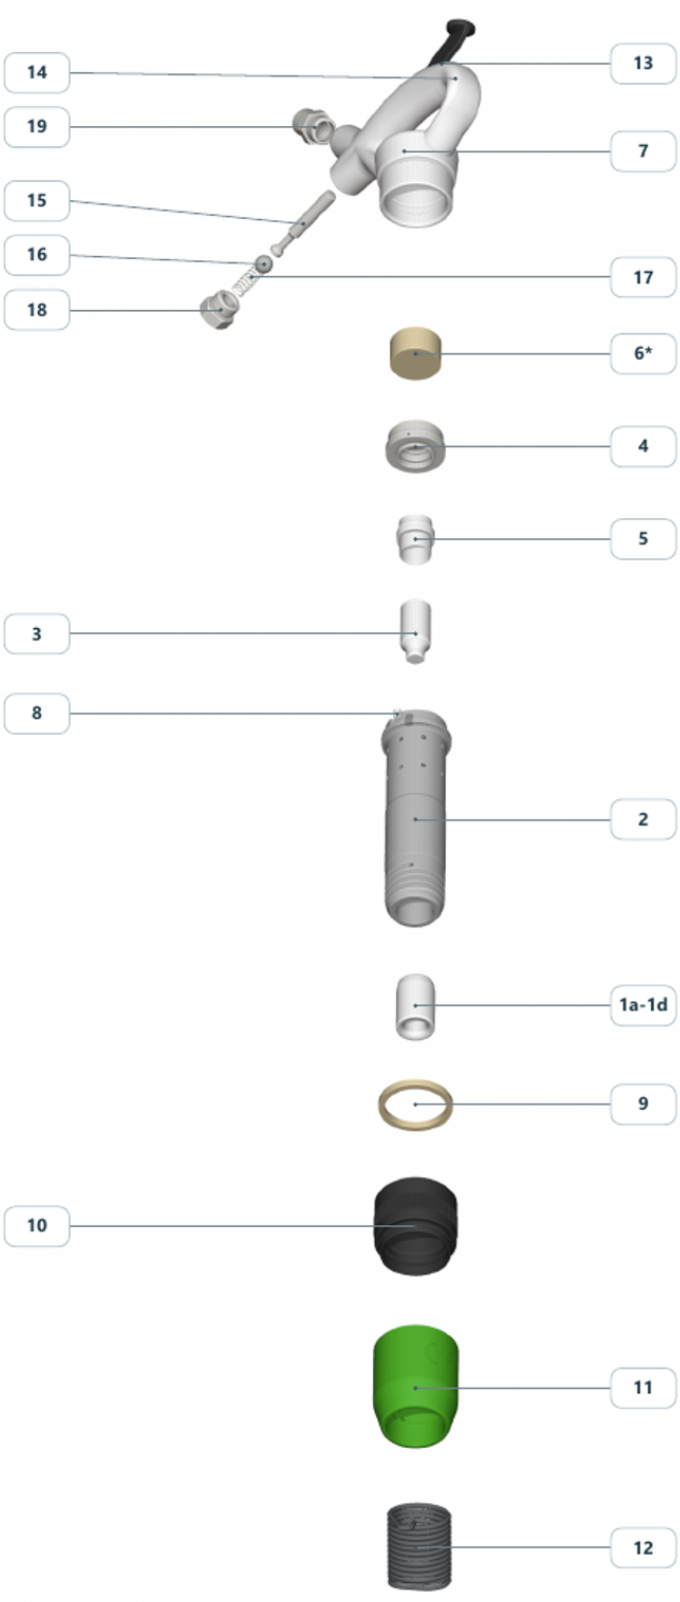

10 Spare parts

Item	Qty.	Description	Part number
1a	1	Bushing – RS 17.5	052-0501
1b	1	Bushing – R 17.5 × 60	052-0502
1c	1	Bushing – RS 20	052-0503
1d	1	Bushing – R 20 × 60	052-0504
2	1	Cylinder	052-0563
3	1	Piston	052-0392
4	1	Cylinder cover	052-0383
5	1	Valve sleeve	052-0384
6	1	Buffer	307-2505
7	1	Complete handle	052-0525
8	1	Cylindrical pin	303-1282
9	1	Ring	307-2559
10	1	Clamping nut	052-0527
11	1	Silencer	307-2538
12	1	Spring cap	304-7183
13	1	Trigger	052-0057
14	1	Pin	304-3442
15	1	Valve	052-0116
16	1	Ball	307-1987
17	1	Spring	304-7018
18	1	Plug	306-0202
19	1	Nipple	306-0223

NOTICE – Damage to the cylinder
Incorrect removal or replacement of the chisel bushing can damage the cylinder. Have chisel bushings replaced exclusively by F+K Service. Do not remove or replace them yourself.

NOTICE – Damage to the hammer
Reusing the existing buffer when replacing the cylinder cover can damage the hammer. Always replace buffer 307-2505 during this work.

Variants and spare-parts orders
052-60531: bushing 1a; 052-60532: bushing 1b; 052-60533: bushing 1c; 052-60534: bushing 1d. Spring retainer 12 applies to all four variants. State the article number and shank when ordering.