
9 Exploded view FK 4

FK 4: Schematic view for identifying parts. Blue links open the relevant article in the shop.

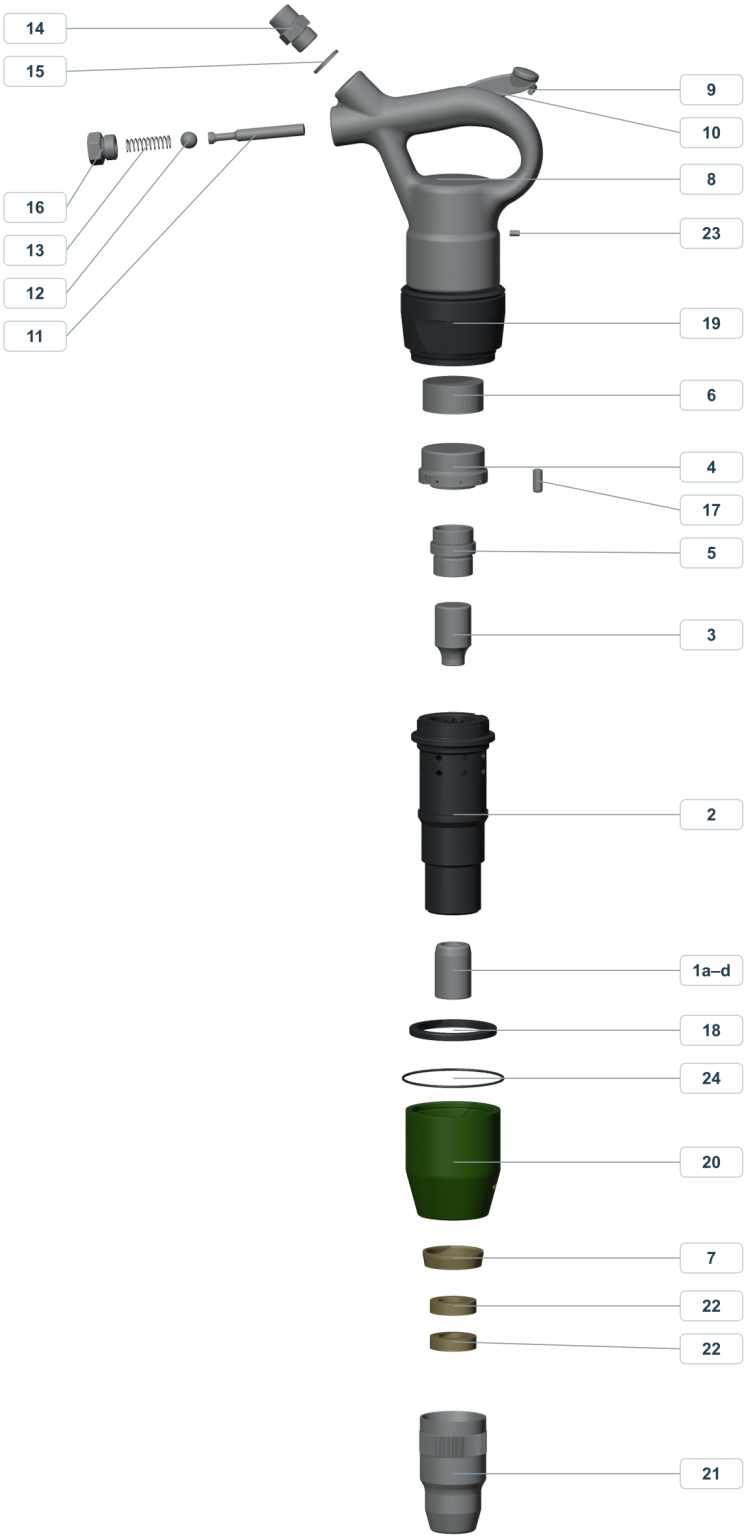

10 Spare parts

Item	Qty.	Description	Part number
1a	1	Bushing	052-0501
1b	1	Bushing	052-0502
1c	1	Bushing	052-0503
1d	1	Bushing	052-0504
2	1	Cylinder	052-0500
3	1	Piston	052-0549
4	1	Cylinder cover	052-0274
5	1	Valve sleeve	052-0238
6	1	Buffer	307-2504
7	1	Conical ring	307-2115
8	1	Complete handle	052-0505
9	1	Cylindrical pin	304-3442
10	1	Trigger	052-0057
11	1	Valve	052-0117
12	1	Ball	307-1987
13	1	Compression spring	304-7018
14	1	Nipple	306-0223
15	1	Sealing ring OK-1/2	313-531774
16	1	Plug	306-0202
17	1	Pin	304-3630
18	1	Ring	307-2545
19	1	Clamping nut	052-05071
20	1	Silencer	307-2537
21	1	Screw cap	052-8403
22	2	Impact ring	307-2114
23	1	Pin	304-3628
24	1	O-ring	307-2167

NOTICE – Damage to the cylinder
Incorrect removal or replacement of the chisel bushing can damage the cylinder. Have chisel bushings replaced exclusively by F+K Service. Do not remove or replace them yourself.

NOTICE – Damage to the hammer
Reusing the existing buffer when replacing the cylinder cover can damage the hammer. Always replace buffer 307-2504 during this work.

Variants and spare-parts orders
052-59291A: bushing 1a; 052-59292A: bushing 1b; 052-59293A: bushing 1c; 052-59294A: bushing 1d. Screw cap 21 and both impact rings 22 apply to all four variants. State the article number and shank when ordering.