
9 Exploded view FK 5

FK 5: Schematic view for identifying parts, not a scale drawing. Blue links open the relevant article in the shop.

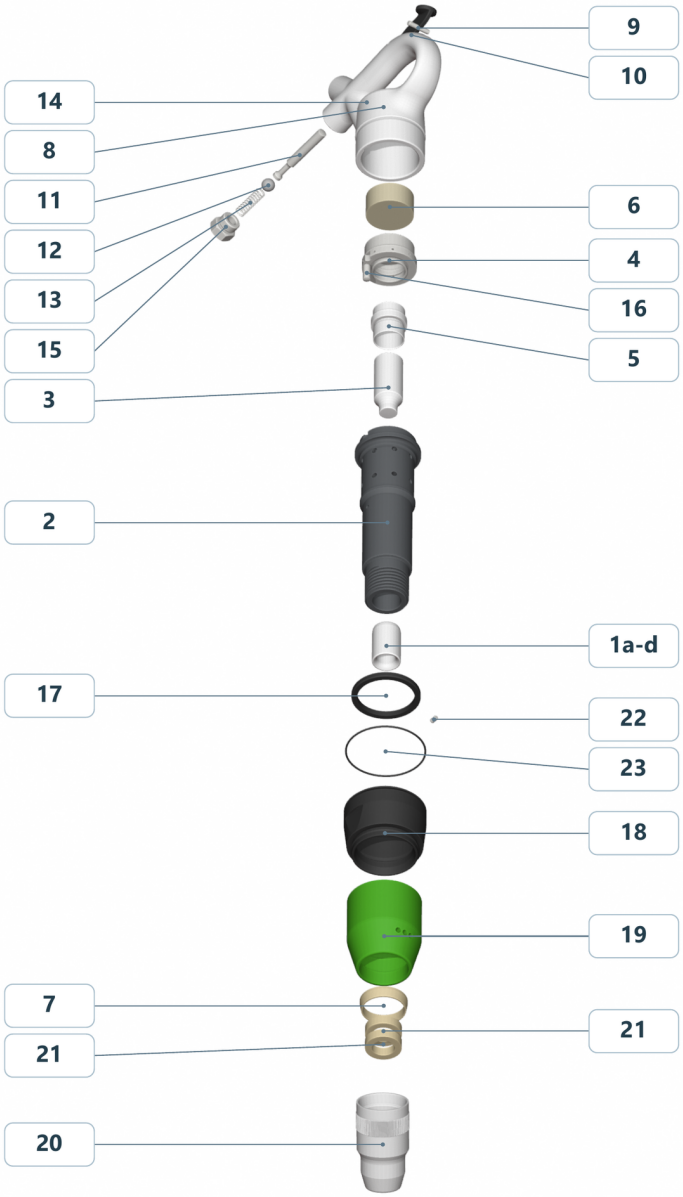

10 Spare parts

Item	Qty.	Description	Part number
1a	1	Bushing	052-0501
1b	1	Bushing	052-0502
1c	1	Bushing	052-0503
1d	1	Bushing	052-0504
2	1	Cylinder	052-0510
3	1	Piston	052-0559
4	1	Cylinder cover	052-0274
5	1	Valve sleeve	052-0238
6	1	Buffer	307-2504
7	1	Conical ring	307-2115
8	1	Complete handle	052-0505
9	1	Cylindrical pin	304-3442
10	1	Trigger	052-0057
11	1	Valve	052-0117
12	1	Ball	307-1987
13	1	Compression spring	304-7018
14	1	Nipple	306-0223
15	1	Plug	306-0202
16	1	Pin	304-3630
17	1	Ring	307-2545
18	1	Clamping nut	052-05071
19	1	Silencer	307-2537
20	1	Screw cap	052-8403
21	2	Impact ring	307-2114
22	1	Pin	304-3628
23	1	O-ring	307-2167

NOTICE – Damage to the cylinder
Incorrect removal or replacement of the chisel bushing can damage the cylinder. Have chisel bushings replaced exclusively by F+K Service. Do not remove or replace them yourself.

NOTICE – Damage to the hammer
Reusing the existing buffer when replacing the cylinder cover can damage the hammer. Always replace buffer 307-2504 during this work.

Variants and spare-parts orders
052-59391A: bushing 1a; 052-59392A: bushing 1b; 052-59393A: bushing 1c; 052-59394A: bushing 1d. Screw cap 20 and both impact rings 21 apply to all four variants. State the article number and shank when ordering.