
9 Exploded view FK 701.4

Schematic parts identification. Blue links open spare parts in the shop.

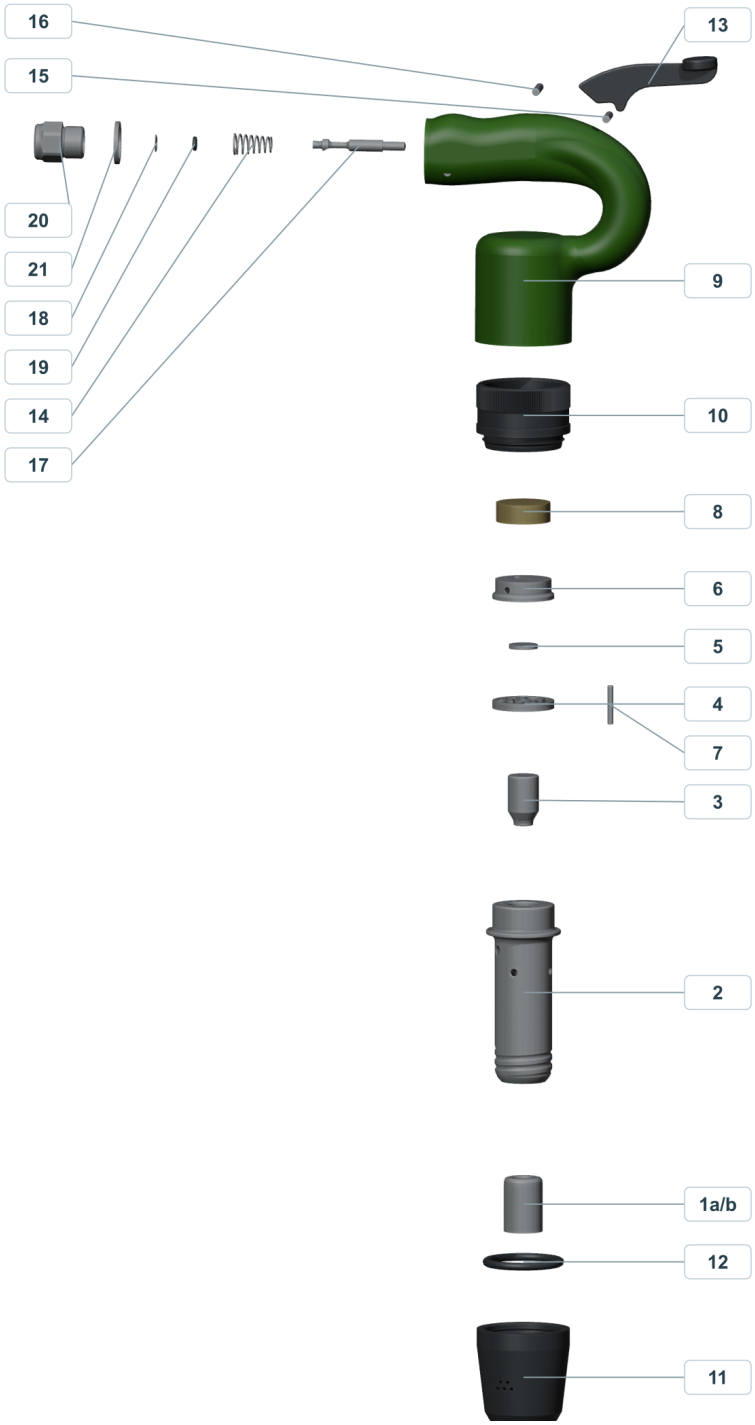

10 Spare parts

Item	Qty.	Description	Part number
1a	1	Bushing R 10.3 × 36	052-7233
1b	1	Bushing R 10.0	052-7235
2	1	Cylinder	052-0012
3	1	Piston	052-0352
4	1	Lower cover	052-0051
5	1	Valve plate	307-2337
6	1	Upper cover	052-0050
7	1	Pin	304-5646
8	1	Buffer	307-2338
9	1	Complete handle	052-0300
10	1	Clamping nut	052-0058
11	1	Silencer	307-2540
12	1	O-ring	307-2439
13	1	Lever	052-0309
14	1	Spring	304-7103
15	1	Pin	303-1272
16	1	Pin	303-1273
17	1	Valve	052-0305
18	1	Serrated ring	304-5292
19	1	O-ring	307-2445
20	1	Nipple	052-0219
21	1	Sealing ring OK-3/8	313-531773

NOTICE – Damage to the cylinder
Incorrect removal or replacement of the chisel bushing can damage the cylinder. Have chisel bushings replaced exclusively by F+K Service. Do not remove or replace them yourself.

NOTICE – Damage to the hammer
Reusing the old buffer when replacing the upper cover, lower cover or control plate can damage the hammer. Always replace buffer 307-2338 during this work.

Variants and spare-parts orders
Bushing 052-7233 for R 10.3 × 36. Older R 10.0 bushing 052-7235 is only a spare-part alternative; these instructions apply to article 052-51093. Nipple 052-0219 on the handle as shown in the drawing. Handle (9) is also available complete (052-0300).