
9 Exploded view FK 702 G

Schematic parts identification. Blue article numbers open spare parts in the shop.

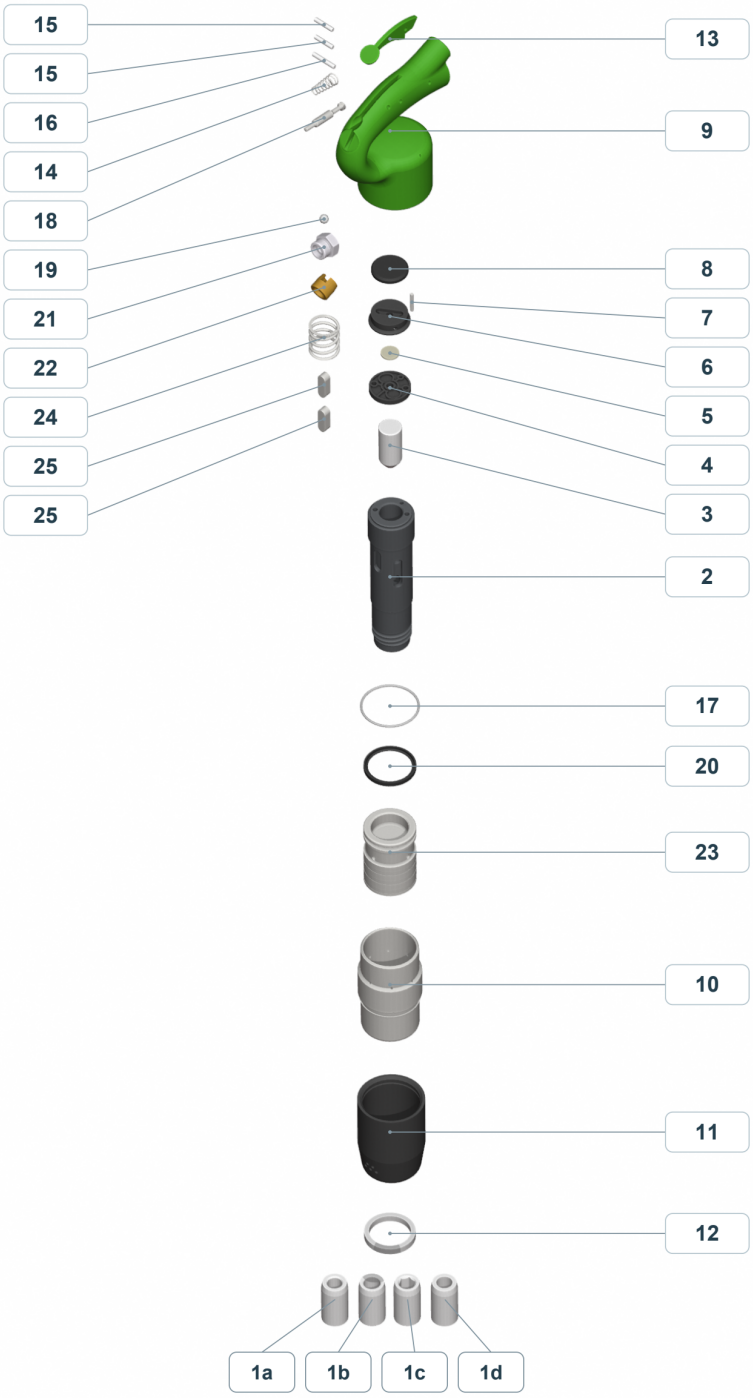

10 Spare parts

Item	Qty.	Description	Part number
1a	1	Bushing R 12.7 × 50	052-0073
1b	1	Bushing R 14.3 × 50	052-8247
1c	1	Bush RS 14.3	052-8248
1d	1	Bushing RK 13	052-8249
2	1	Cylinder	052-0319
3	1	Piston	052-0025
4	1	Lower cover	052-0053
5	1	Valve plate	307-2501
6	1	Upper cover	052-0052
7	1	Pin	304-5646
8	1	Buffer	052-0322
9	1	Complete handle	052-0302
10	1	Cylinder hood	052-0327
11	1	Silencer	052-0316
12	1	Ring	307-2530
13	1	Trigger	052-0312
14	1	Spring	304-7103
15	2	Pin	303-1272
16	1	Pin 4 × 23.8	303-1273
17	1	O-ring	307-2187
18	1	Valve	052-0743
19	1	Ball	307-2082
20	1	Seal kit	307-2190
21	1	Plug	052-0328
22	1	Threaded insert	304-2700
23	1	Hood	052-0326
24	1	Compression spring	304-7520
25	2	Parallel key	304-4557

NOTICE – Damage to the cylinder
Incorrect removal or replacement of the chisel bushing can damage the cylinder. Have chisel bushings replaced exclusively by F+K Service. Do not remove or replace them yourself.

NOTICE – Damage to the hammer
Reusing the old buffer when replacing upper cover, lower cover or control plate can damage the hammer. Always replace buffer 052-0322 during this work.

Variants and spare-parts orders
Bushing alternatives 1a–1d according to the cover. Accessories without position numbers: spring cap 304-7804, two O-rings 307-2079 and optional regulator 052-0087. State article number and shank when ordering. Handle 052-0302 can also be ordered complete and additionally includes strainer 304-5069 (not shown separately).